



巨輪興有限公司

高雄市岡山區岡山北路199號

CHU LUN SING CO.,LTD

No.199, Gangshan N. Rd., Gangshan Dist.,
Kaohsiung City 82059, Taiwan

<http://www.sunrun.com.tw>

E-mail:sun.run@msa.hinet.net

TEL:886-7-6210505

FAX:886-7-6217575

拆胎工具 操作說明

315-B



中文 : C1-C3

中文
English
Ver.16

1. 安全預防措施



不遵守以下的注意事項和警告將引起設備損失及人員傷害。



重要事項：未滿18歲人員不得擅自操作。操作SUN RUN油壓設備前請先仔細閱讀並了解相關操作手冊、安全事項和警告事項。操作人員負有油壓設備週邊之人員及環境之安全責任。



警告事項：操作人員於使用期間為避免傷害，需全程配戴安全防護措施。



警告事項：當零件出現裂痕或損壞時，應立即以**SUN RUN**零件更換。正確標準的零件可防止人員或設備損傷。**SUN RUN**零件經特別設計可完全適用並適用產品標稱的額定荷載。或壓力



重要事項：液壓設備必需由合格的液壓技工進行維修。需要修理時，請聯繫就近的**SUN RUN**服務據點並使用**SUN RUN**液壓油保固方為有效。




避免荷載不直接作用在油壓缸的主軸中心上。偏心荷載易導致油壓缸和主軸受損。此外，重物亦可能因傾斜而滑落，引發潛在危險。

2. 規範

Model Number 型 號	Product Name 名 稱	Description 適用功能	Weight 總重 (kg)	Remark 備註
315-B	315拆胎器 315 / Tire separation tools	使無內胎輪胎與鋼圈脫離用工具，輕巧省力 To disassemble tubeless tire and rim	11.0	大卡車用 For truck 適用範圍： 295/R22.2、315/R22.5
315-B(C)	315拆胎器(含315B-BC1) 315/Tire separation tools (include 315B-BC1)			

315-B	315-B(C)
	

3.操作

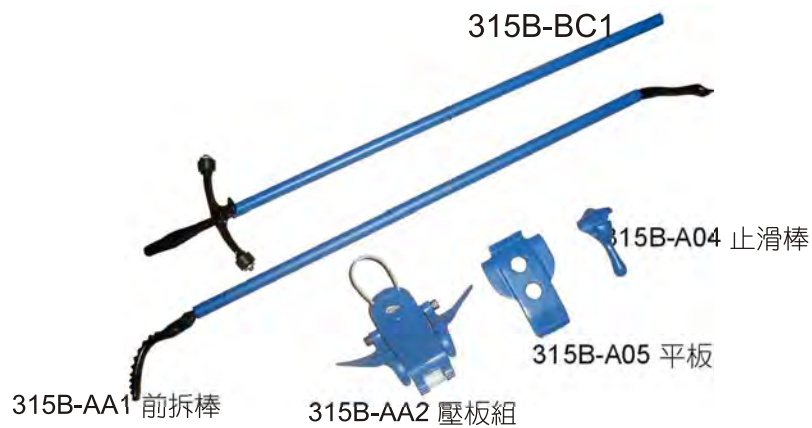

3.1拆胎動作：

- 1.先將大卡車輪胎胎緣利用TO-A、TO-B 或其他輔助工具與鋼圈放鬆。
- 2.於間隙間塗抹潤滑劑再將315B-AA2壓板組滑入大卡車輪胎胎緣與鋼圈間並同時使用315B-AA1前拆棒勾住壓板組如圖1-3，反轉如圖1-4反覆動作使鋼圈儘可能脫離輪胎。
- 3.若仍無法完全分開輪胎與鋼圈則使用315B-A05平板如圖1-5~1-6所示或改以315B-BC1勾入,如圖1-7,即可將輪胎與鋼圈完全分離。



3.操作-續



3.2裝胎動作：

先將輪胎邊緣塗抹潤滑劑再將315B-A04止滑棒插入輪胎與鋼圈一邊間隙如圖2-1，再利用315B-AA1前拆棒反覆將輪胎與鋼圈壓合即可(圖2-2~2-3)。



出廠證明暨保固書

產品名稱：

型 號：

序 號：

出廠日期： / /

保固期間： / / ~ / /

該產品經公司嚴格品質管制,並測試合格出廠,本產品自驗收合格日起保固一年,如非人為使用不當或天然不可抗拒之災害,本公司免費維修,如非以上之原因本公司將酌收材料成本負責維修。

公司：巨輪興有限公司

負責人：蘇明益

高雄市岡山區岡山北路199號

TEL:886-7-6210505

FAX:886-7-6217575



巨輪興有限公司

高雄市岡山區岡山北路199號

CHU LUN SING CO.,LTD

No.199, Gangshan N. Rd., Gangshan Dist.,
Kaohsiung City 82059, Taiwan

<http://www.sunrun.com.tw>

E-mail:sun.run@msa.hinet.net

TEL:886-7-6210505

FAX:886-7-6217575

OPERATING INSTRUCTIONS

Tire separation tools

315-B



English : E1~E3

中文
English
Ver.16

1. SAFETY PRECAUTIONS



Fail to comply with the following cautions and warnings could cause equipment damage and personal injury.



IMPORTANT :Minimum age of the operator must be 18 years The operator must have read and understood all instructions, safety issues, cautions and warnings before starting to operate the SUN RUN equipment. The operator is responsible for this activity towards other persons.



WARNING: Always wear safety glasses. The operator must take precaution against injury due to failure the tool or workpiece.



WARNING: Immediately replace worn or damaged parts with genuine SUN RUN parts. SUN RUN parts are designed to fit properly and withstand rated loads.



IMPORTANT: Hydraulic equipment must only be serviced by a qualified hydraulic technician. For repair service, contact the SUN RUN Service Center in your area. To protect your warranty, use only SUN RUN oil.




Avoid situations where loads are not directly centered on the cylinder plunger. Off-center loads produce considerable strain on cylinder and plungers. In addition, the load may slip or fall, causing potentially dangerous results.

2.SPECIFICATION

Model Number 型 號	Product Name 名 稱	Description 適用功能	Weight 總重 (kg)	Remark 備註
315-B	315拆胎器 315 / Tire separation tools	使無內胎輪胎與鋼圈脫離用工具，輕巧省力 To disassemble tubeless tire and rim	11.0	大卡車用 For truck 適用範圍： 295/R22.2、315/R22.5
315-B(C)	315拆胎器(含315B-BC1) 315/Tire separation tools (include 315B-BC1)			

315-B	315-B(C)
	

3. Operate

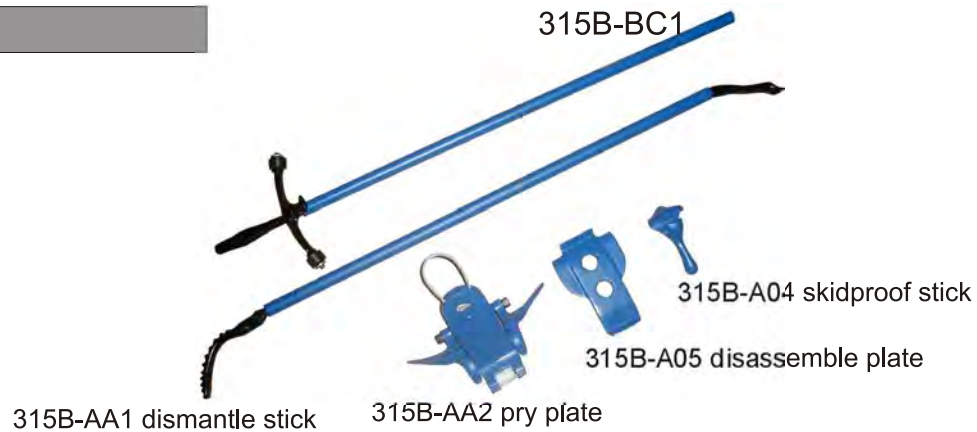


3.1 Tire release :

- 1.Release truck tire bead and rim by TO-A ,TO-B or other auxiliary tools.
- 2.Then use some lubricant in tire bead and slip 315B-AA2 pry plate into tire bead and rim and hooked by 315B-AA1 dismantle stick at the same(Flg.1-3). Reverse pry plate (Flg.1-4) and move around the tire till them separate.
- 3.If you still can't separate the tire and rim , you will use 315B-A05 disassemble plate or 315B-BC1 to separate them completely(Flg.1-5~1-7).



3. Operate-continue

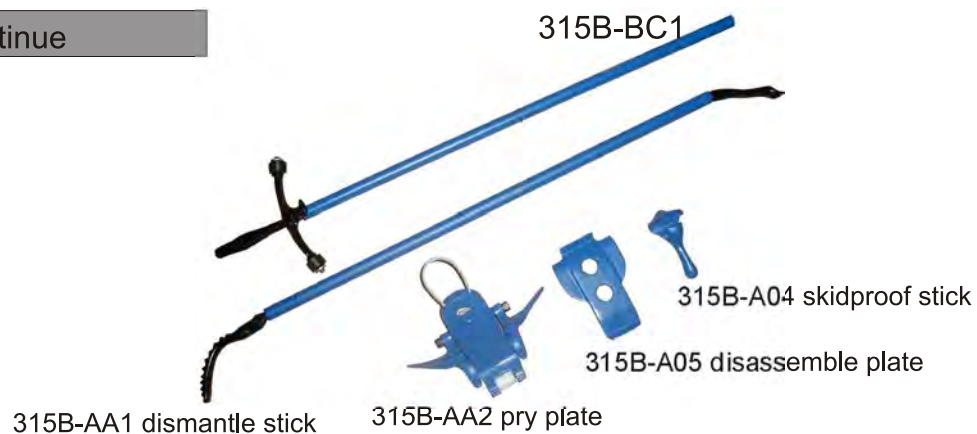

3.2 Install tire and rim :

Smear some lubricant over the tire bead and insert 315B-A04 skidproof stick into one side(Fig.2-1) and hook tire by 315B-AA1 dismantle stick to mix them together(Fig.2-2).

