
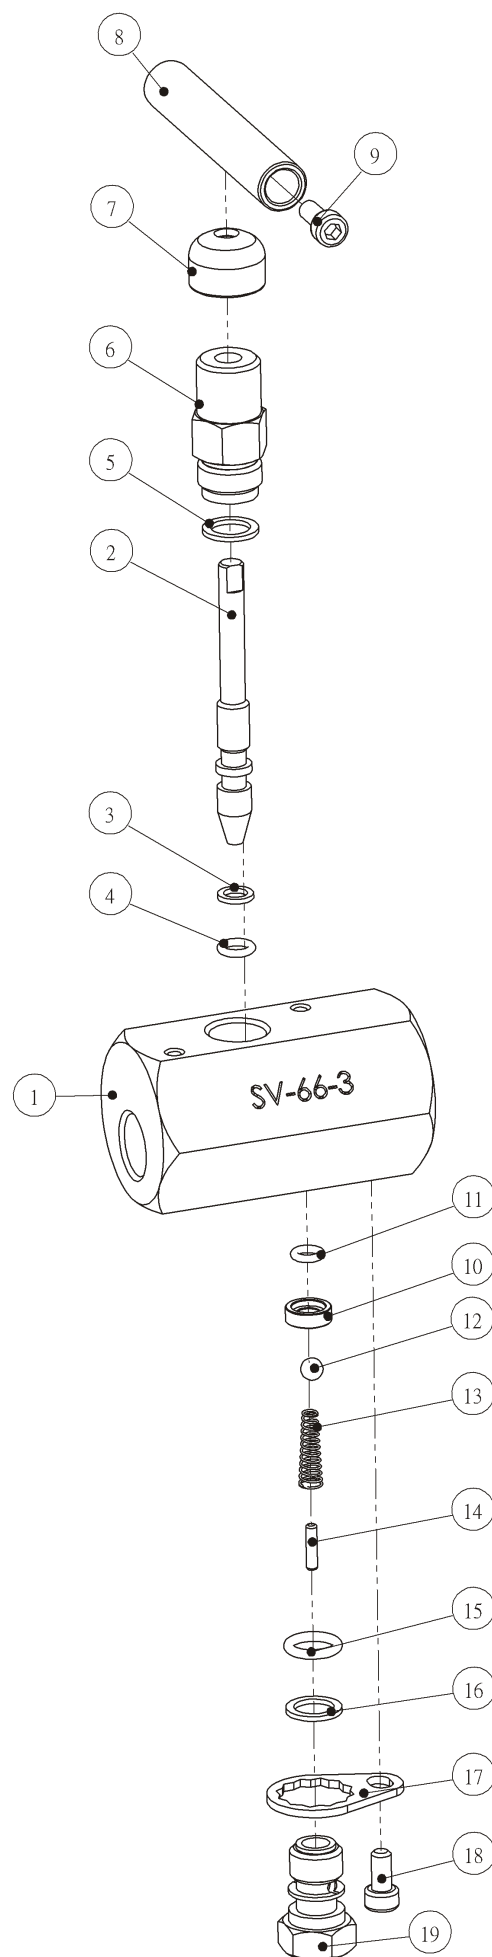


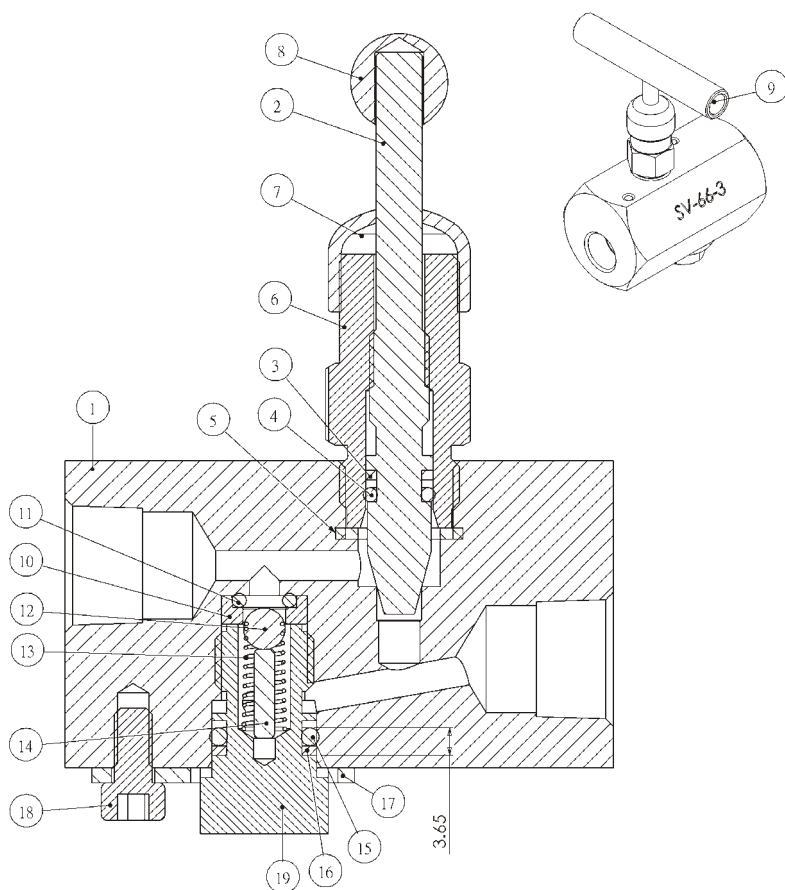



項次	品名	品號	數量
1	本體	SV66-3-A01	1
2	高壓閥軸	SV82SUS-A03	1
* 3	背托環	XGP006	1
* 4	O型環	XBP006-90-NOK	1
* 5	銅華司	XWC14-10-1.2	1
6	接頭	SV82-A02	1
7	防塵帽	SV82SUS-A05	1
8	扳桿	SV82-A04	1
* 9	螺栓	XNCAPM05-12	1
10	墊圈	SV66-3-A10	1
* 11	O型環	XBP005-90	1
12	鋼珠	XM7/32	1
13	彈簧	XF0.5-D5-D6-20L-12T=	1
14	軸承針	SC66-3-A11	1
* 15	O型環	XBP010A	1
* 16	背托環	XGP010A	1
17	固定板	SV66-A09	1
* 18	螺栓	XNCAPM05-8L	1
19	塞頭	SV66-3-A07	1

* 修理包


項次	品名	品號	數量
1	本體	SV42-A01	1
2	止動環	SV42-A03	1
3	塞頭	SV42-A04	1
* 4	O型環	XBP019	1
* 5	背托環	XGP019	1
6	針座	SV42-A02	1
7	擋針	SV42-A05	1
8	鋼珠	XM5/16-G10	1
* 9	O型環	XBAS113	1
* 10	背托環	XGAS113	1
* 11	O型環	XBAS111	1
* 12	背托環	XGAS111	1
13	彈簧	XF0.8-D6.1-19.2L-10T=	1



* 修理包

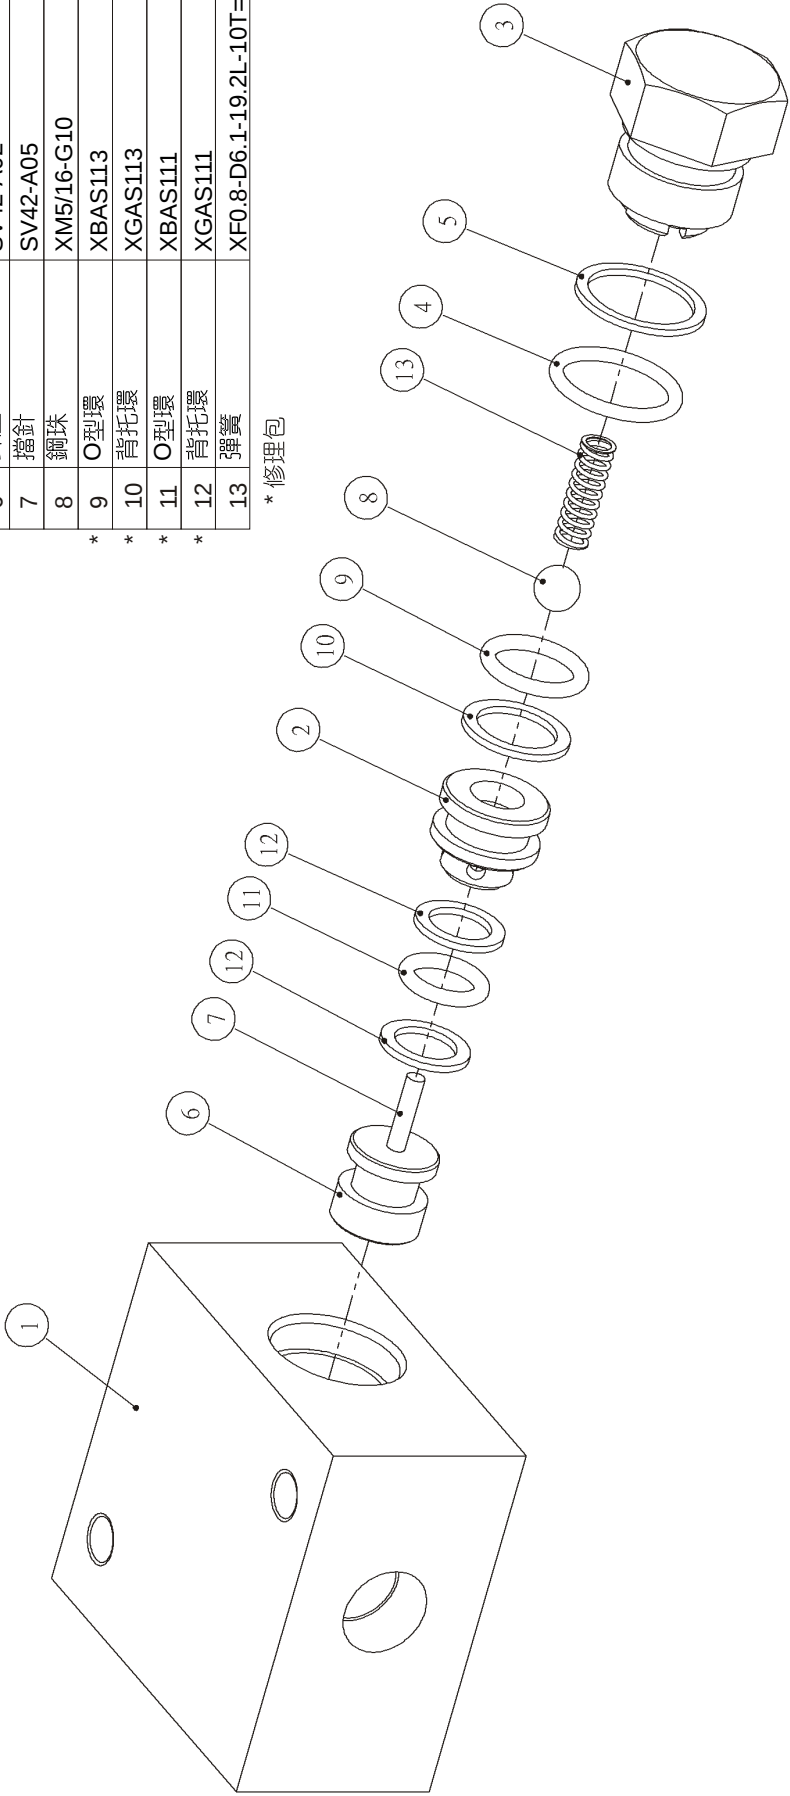

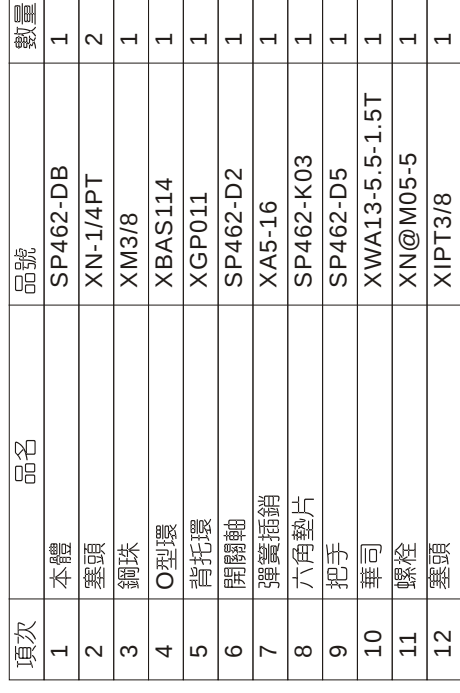

項次	品名	品號	數量
1	底座	SP464-C1	1
2	塞頭	XN-1/16PT	2
3	塞頭	XN-T14PT	1
4	彈簧插銷	XA4-16	1
5	O型環	XBAS111	4
6	中座	SP464-C2	1
7	彈簧	XF1.5-D10-6.5L-3T=	4
8	滾動軸承	SP464-c2-5	4
9	背托環	XGP008	8
10	O型環	XP008	4
11	滾動承座	SP464-C2-1	4
12	O型環	XBAS134	1
13	O型環	XBAS012	1
14	背托環	XGP010	1
15	中心軸	SP464-C3-7	1
16	回油塊	SP464-C3-6	1
17	彈簧插銷	XA1/-5/8	1
18	墊片	SP464-C3-5	1
19	轉針軸承	XMNTB2035	1
20	上座	SP464-C3	1
21	彈簧	XF0.9-D5.7-13.6L-8T	1
22	鋼珠	XM7/32	1
23	彈簧插銷	XA7/32-3/4	1
24	萬向墊片	SP464-C3-3	1
25	把手	SP464-C4-1	1
26	華司	XWA13-5.5-1.5T	1
27	螺栓	XN@M5-12	1
28	螺栓	XNCAPM05-25	2
29	螺栓	XNCAPM10-60	4

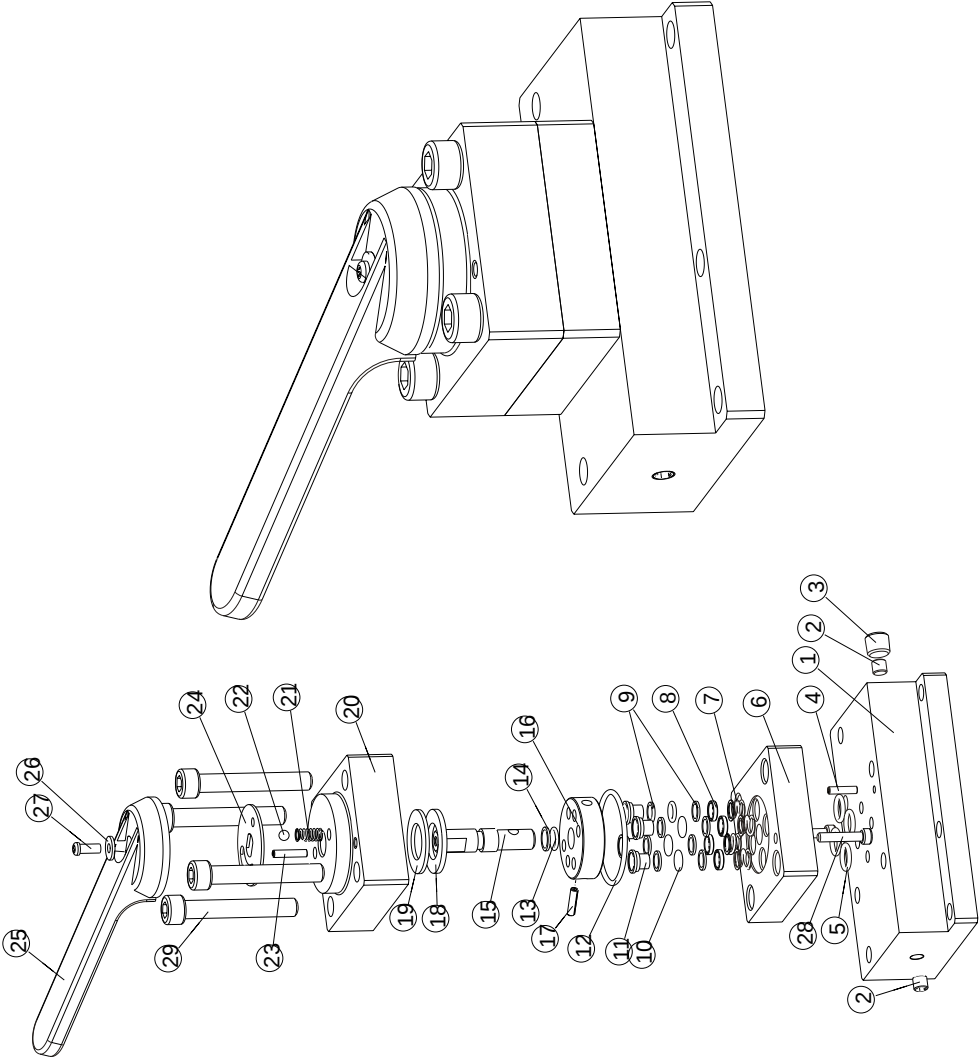

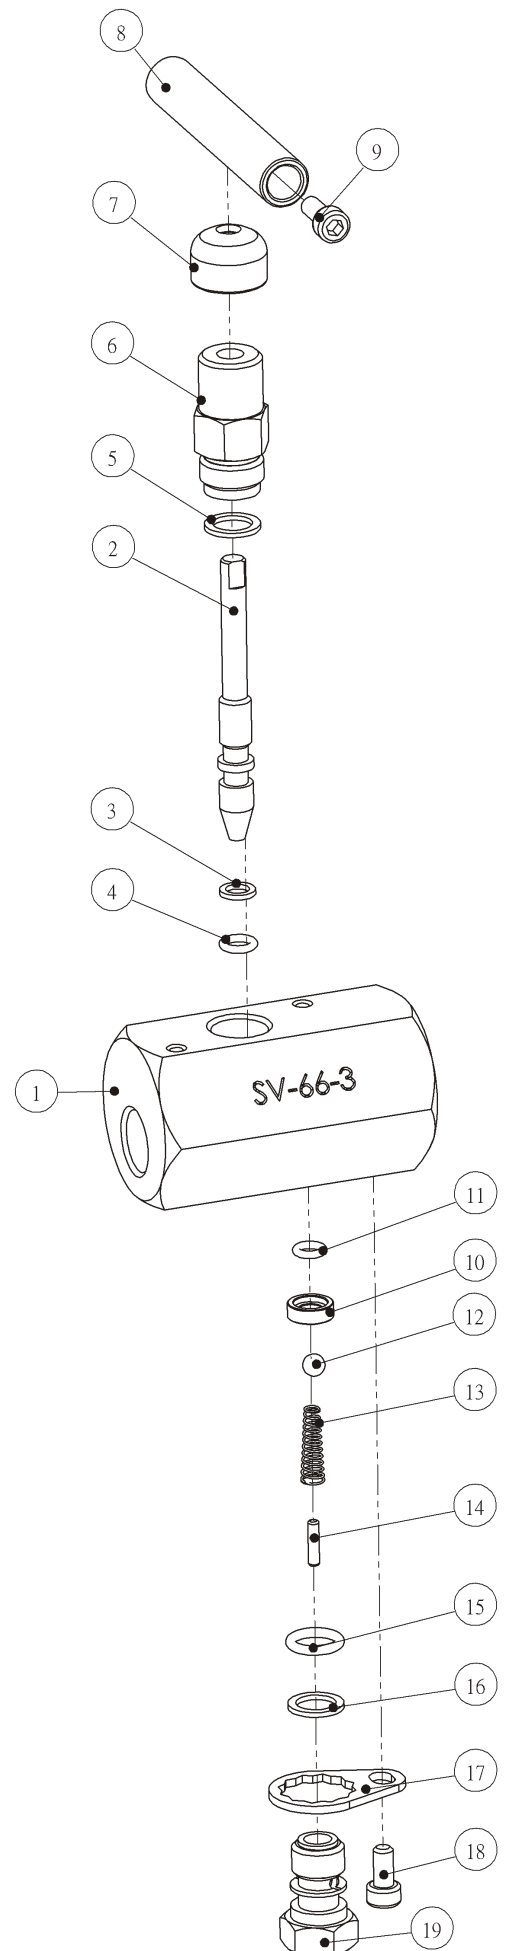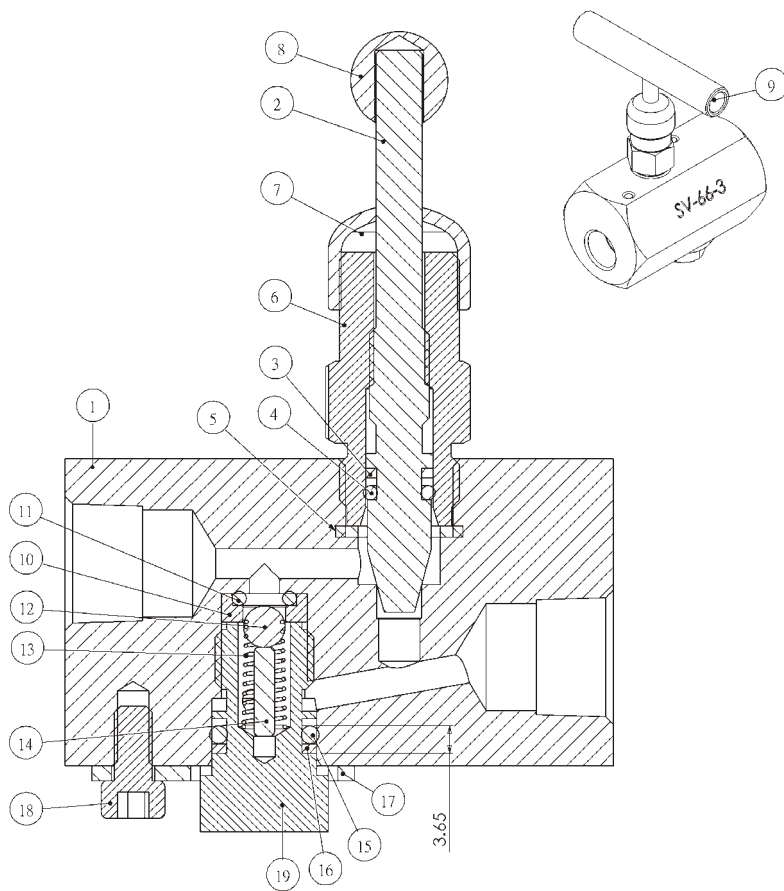



Item	Product	List	Q'ty
1	body	SV66-3-A01	1
2	H.P valve pin	SV82SUS-A03	1
* 3	back-up ring	XGP006	1
* 4	O-ring	XBP006-90-NOK	1
* 5	pu washer	XWC14-10-1.2	1
6	connector	SV82-A02	1
7	dust cover	SV82SUS-A05	1
8	handle	SV82-A04	1
* 9	bolt	XNCAPM05-12	1
10	gasket	SV66-3-A10	1
* 11	O-ring	XBP005-90	1
12	steel ball	XM7/32	1
13	spring	XF0.5-D5-D6-20L-12T=	1
14	bearing pin	SC66-3-A11	1
* 15	O-ring	XBP010A	1
* 16	back-up ring	XGP010A	1
17	fixed plate	SV66-A09	1
* 18	bolt	XNCAPM05-8L	1
19	plug	SV66-3-A07	1

* Repair Kit.

Item	Product	List	Q'ty
1	body combination	SV42-A01	1
2	stop ping	SV42-A03	1
3	plug	SV42-A04	1
* 4	O-ring	XBP019	1
* 5	back-up ring	XGP019	1
6	ping seat	SV42-A02	1
7	bear ping	SV42-A05	1
8	steel ball	XM5/16-G10	1
* 9	O-ring	XBAS113	1
* 10	back-up ring	XGAS113	1
* 11	O-ring	XBAS111	1
* 12	back-up ring	XGAS111	1
13	spring	XF0.8-D6.1-19.2L-10T=	1

* Repair Kit.

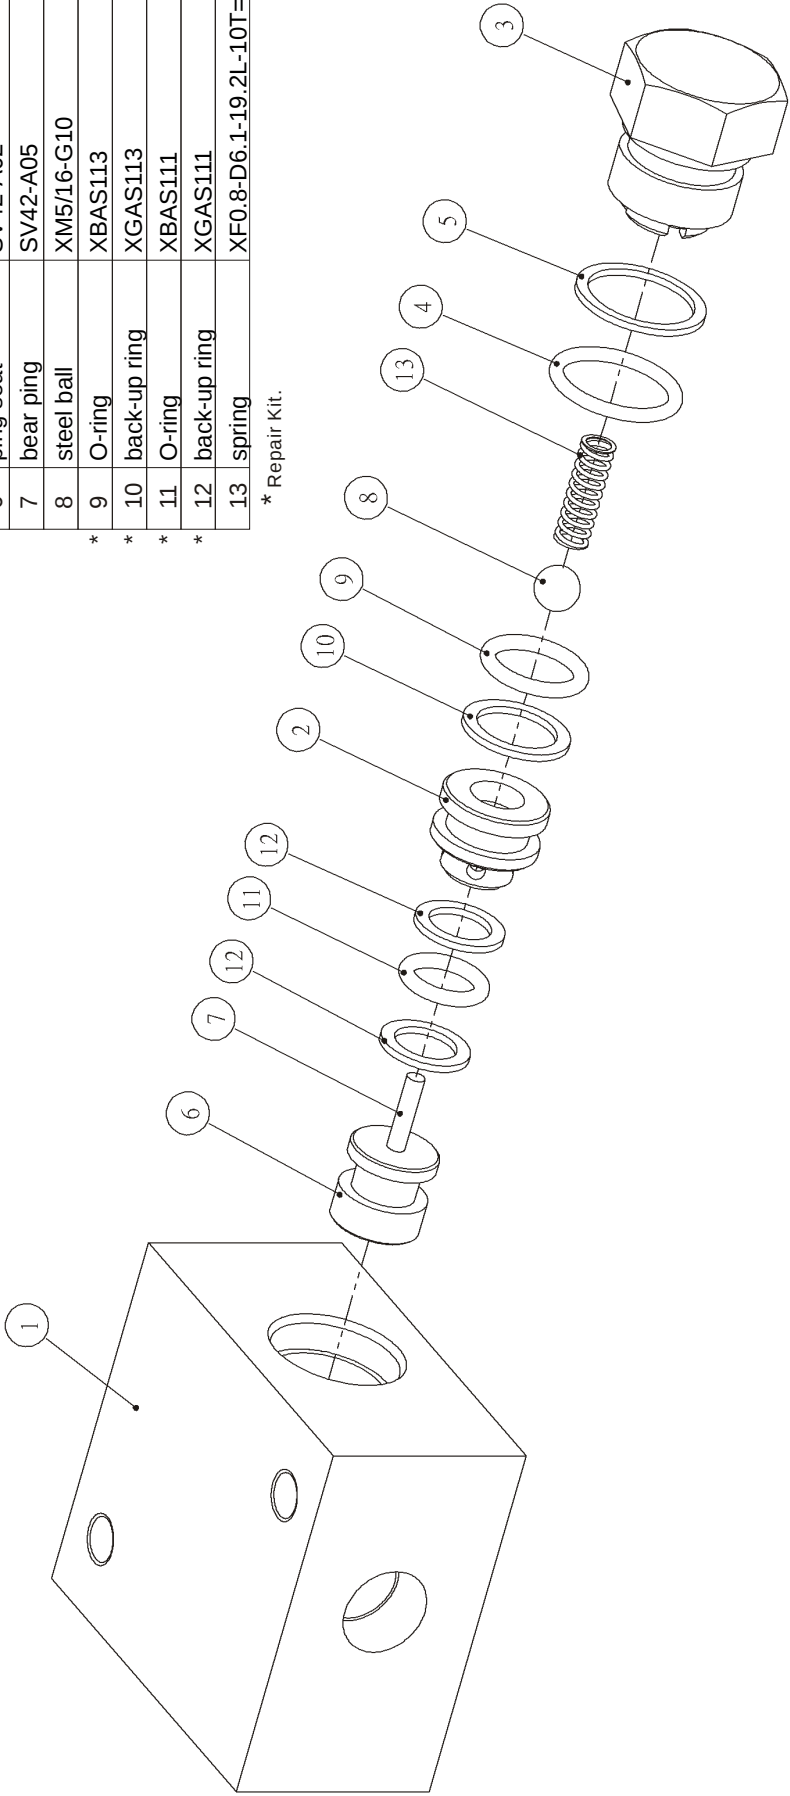

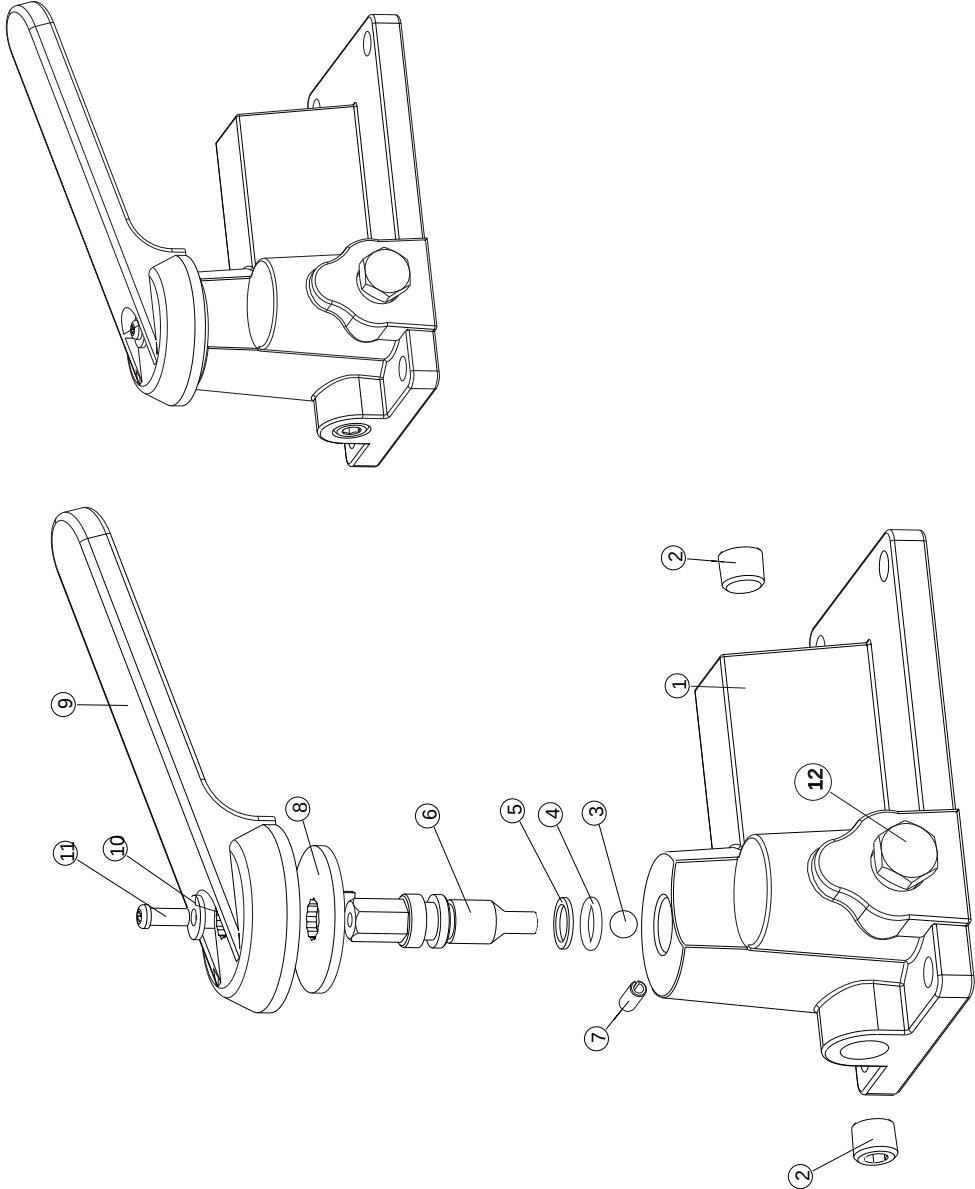

Item	Product	List	Q'ty
1	Release assembly	SP462-DB	1
2	plug	XN-1/4PT	2
3	steel ball	XM3/8	1
4	O-ring	XBAS114	1
5	back up ring	XGP011	1
6	switch plunger	SP462-D2	1
7	spring pin	XA5-16	1
8	hex. Plate	SP462-K03	1
9	handle	SP462-D5	1
10	washer	XWA13-5.5-1.5T	1
11	bolt	XN@M05-5	1
12	plug	XIPT3/8	1

Item	Product	List	Q'ty
1	Bottom block	SP464-C1	1
2	plug	XN-1/16PT	2
3	plug	XN-T14PT	1
4	spring pin	XA4-16	1
5	O-ring	XBAS111	4
6	middle block	SP464-C2	1
7	spring	XF1.5-D10-6.5L-3T=	4
8	fluctuation bearing	SP464-c2-5	4
9	back-up ring	XGP008	8
10	O-ring	XP008	4
11	fluctuation block	SP464-C2-1	4
12	O-ring	XBAS134	1
13	O-ring	XBAS012	1
14	back-up ring	XGP010	1
15	center plunger	SP464-C3-7	1
16	oil return block	SP464-C3-6	1
17	spring pin	XA1/-5/8	1
18	space	SP464-C3-5	1
19	rolling pin bearing	XMNTB2035	1
20	up block	SP464-C3	1
21	spring	XF0.9-D5.7-13.6L-8T	1
22	steel ball	XM7/32	1
23	spring pin	XA7/32-3/4	1
24	swivel plate	SP464-C3-3	1
25	handle	SP464-C4-1	1
26	washer	XWA13-5.5-1.5T	1
27	bolt	XN@M5-12	1
28	bolt	XNCAPM05-25	2
29	bolt	XNCAPM10-60	4

