



編號	品名	數量
1	底板	1
2	O型環	1
3	墊片	1
4	油封	1
5	主軸	1
6	O型環	1
7	通氣孔	1
8	鋼珠	1
9	O型環	1
10	洩壓閥	1
11	高壓鋼珠	1
12	彈簧	1
13	鋼珠	1
14	螺栓	1
15	低壓鋼珠	1
16	彈簧	1
17	鋼珠	1
18	螺栓	1
19	鋼珠	1
20	螺栓	1
21	O型環	1
22	墊片	1
23	活塞	1
24	萬向環	1
25	R型銷	1
26	螺栓	1

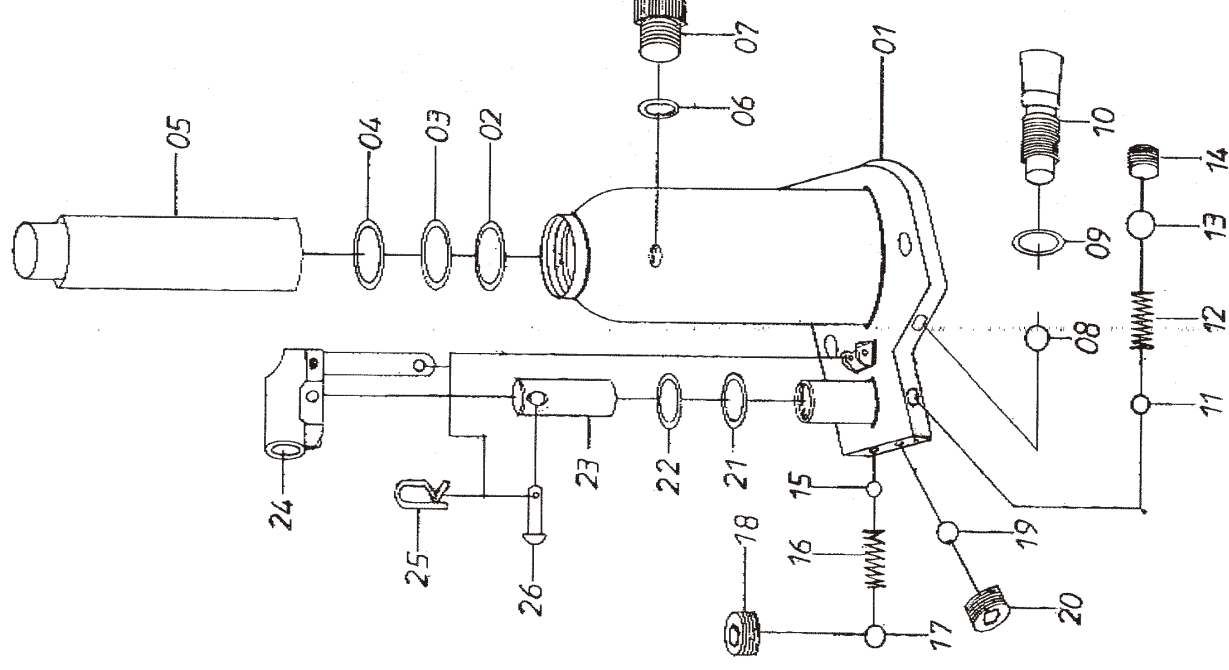

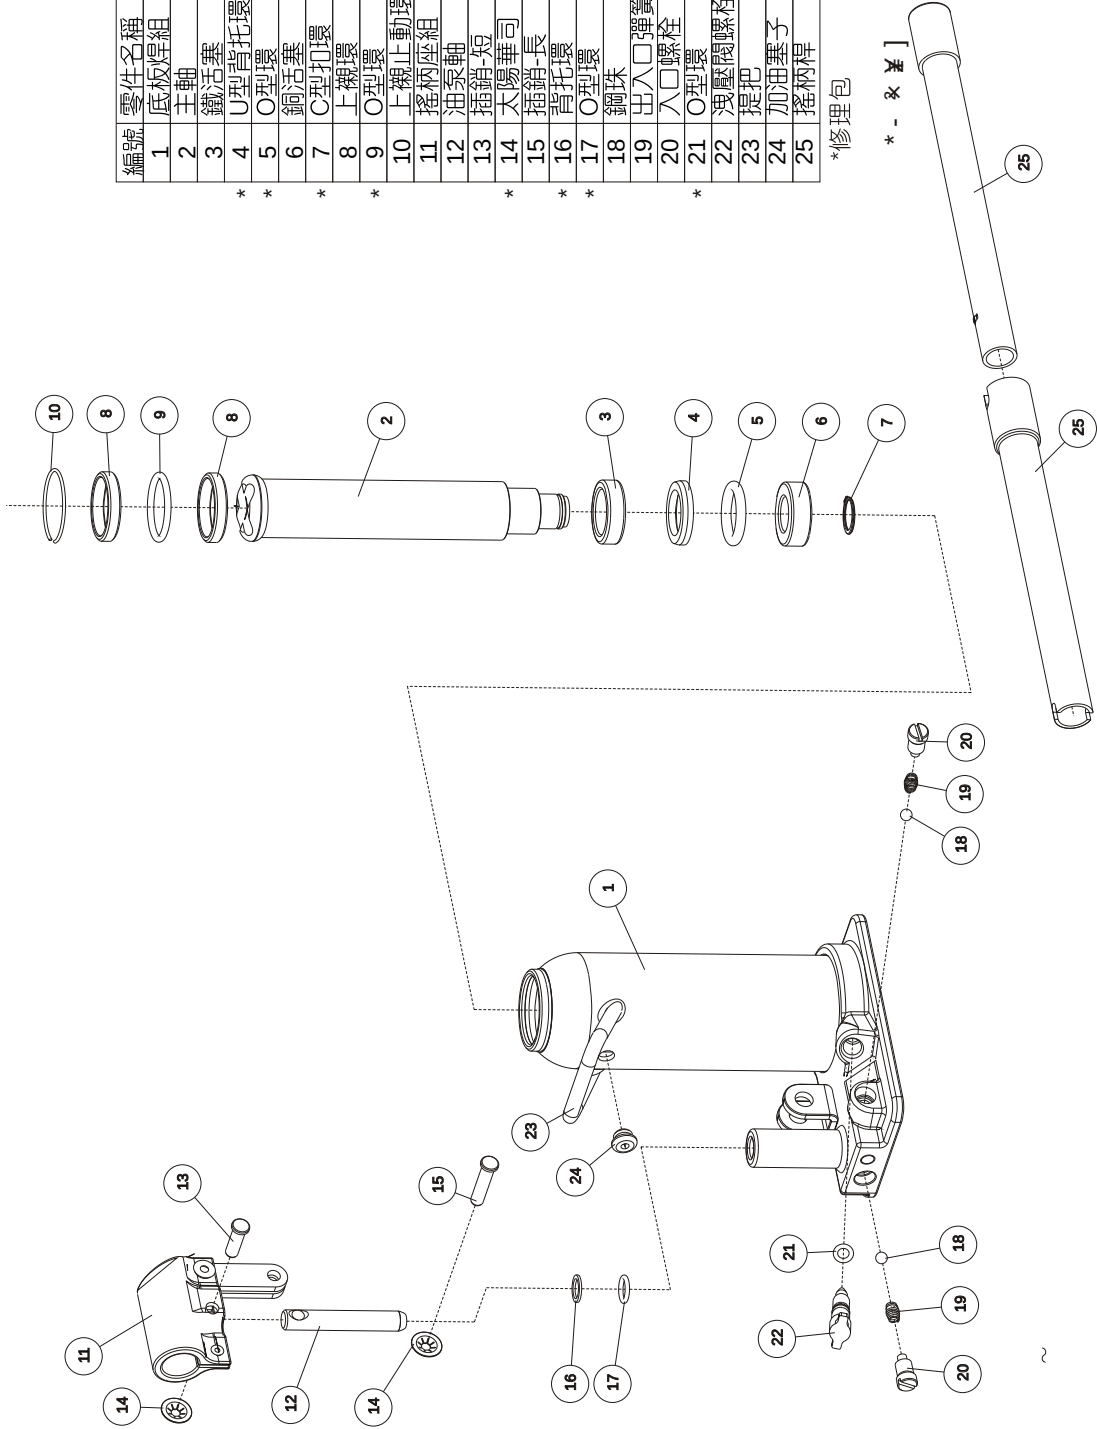


編號	零件名稱	數量	品號
1	底板焊組	1	SH05B-B-B1
2	主軸	1	SH05B-A01
3	鐵活塞	1	DH2.5E-B05
4	U型背托環	1	XEDH2.5E
5	O型環	1	XBAS318
6	銅活塞	1	DH2.5E-B06
7	C型扣環	1	XAS19
8	上襯環	2	DH2.5E-B07
9	O型環	1	XBAS218
10	上襯止動環	1	XA@1.6-D41
11	搖柄座組	1	DH2.5E-BA1
12	油泵軸	1	SH05B-A02
13	插銷-短	1	DH2.5E-B14
14	太陽華司	2	DH2.5E-B18-K
15	插銷-長	1	SH05B-A03
16	背托環	1	XGP011
17	O型環	1	XBP011
18	鋼珠	2	XM1/4
19	出入口彈簧	2	XF0.3-D5.3-D7-D5.3-14L
20	入口螺柱	2	ST20-B25
21	O型環	1	XB2.38-5.94
22	洩壓閥螺栓	1	SH1070-B22
23	提把	1	SU08-42-60A82
24	加油塞子	1	XCOO
25	搖柄桿	1	DH2.5E-B17

*修理包


適用範圍：
手動液壓千斤頂

適用型號:SH-10A/ SH-10B

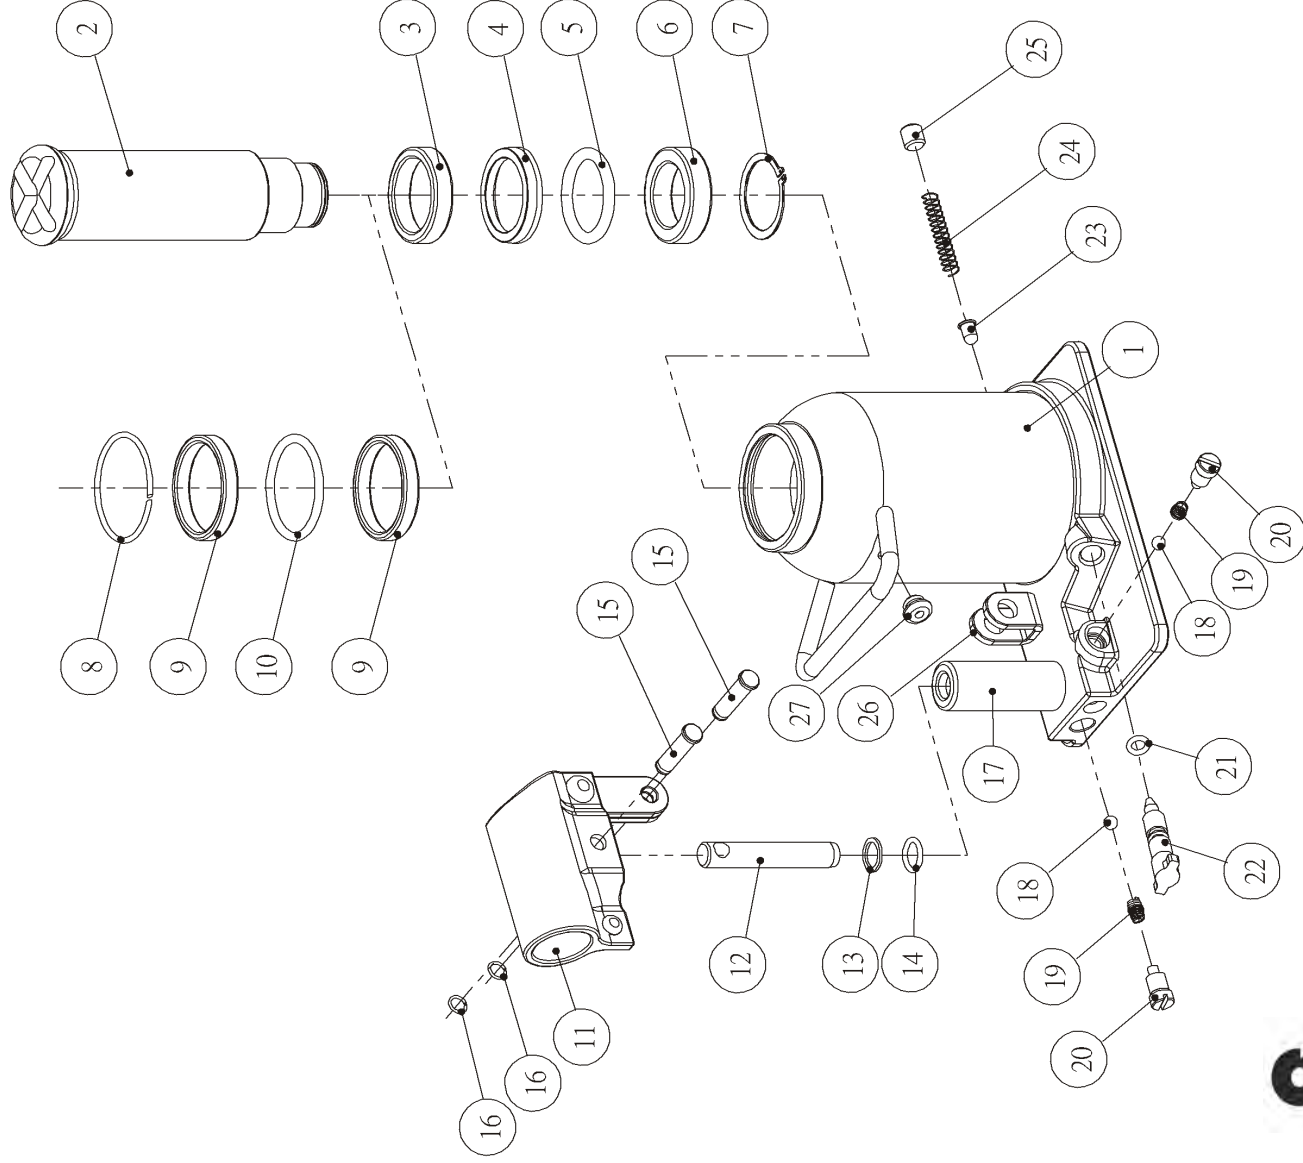

編號	零件名稱	數量	品號	品號
1	底板焊組	1	SH-B-10AB1	SH-B-10BB1
2	主軸組	1	SH-B-10AB2	SH-B-10BB2
3	鐵活塞	1	DH5E-B05	DH5E-B05
4	特製背托環	1	XEDH5E	XEDH5E
5	O型環	1	XBAS324	XBAS324
6	鉗活塞	1	DH5E-B06-1	DH5E-B06-1
7	C型扣環	1	XAS30	XAS30
8	上襯止動環	1	XA@2-D55.5	XA@2-D55.5
9	上襯環	2	ST20-B04A	ST20-B04A
10	O型環	1	XB4.55-42	XB4.55-42
11	搖柄座組	1	SH05-B10	SH05-B10
12	油泵軸	1	O1-14-72	O1-14-72
13	背托環	1	XGP014	XGP014
14	O型環	1	XBP014-90	XBP014-90
15	固定插銷	2	DH5E-B14	DH5E-B14
16	止動環	2	XA@1.1-d7	XA@1.1-d7
17	油泵	1	O0-14-0-51	O0-14-0-51
18	鋼珠	2	XM1/4-G10	XM1/4-G10
19	出入口彈簧	2	XF0.3-5.3-7-14L	XF0.3-5.3-7-14L
20	入口螺絲	2	ST20-B25	ST20-B25
21	O型環	1	XB2.38-5.94	XB2.38-5.94
22	洩壓閥螺栓	1	SH1070-B22	SH1070-B22
23	濾油網	1	XLOIL	XLOIL
24	濾油彈簧	1	XF0.7-35L銼	XF0.7-35L銼
25	塞頭	1	XN-1/8PT	XN-1/8PT
26	U型塊	1	SH05-B09	SH05-B09
27	加油塞子	1	XC00	XC00

*修理包差]

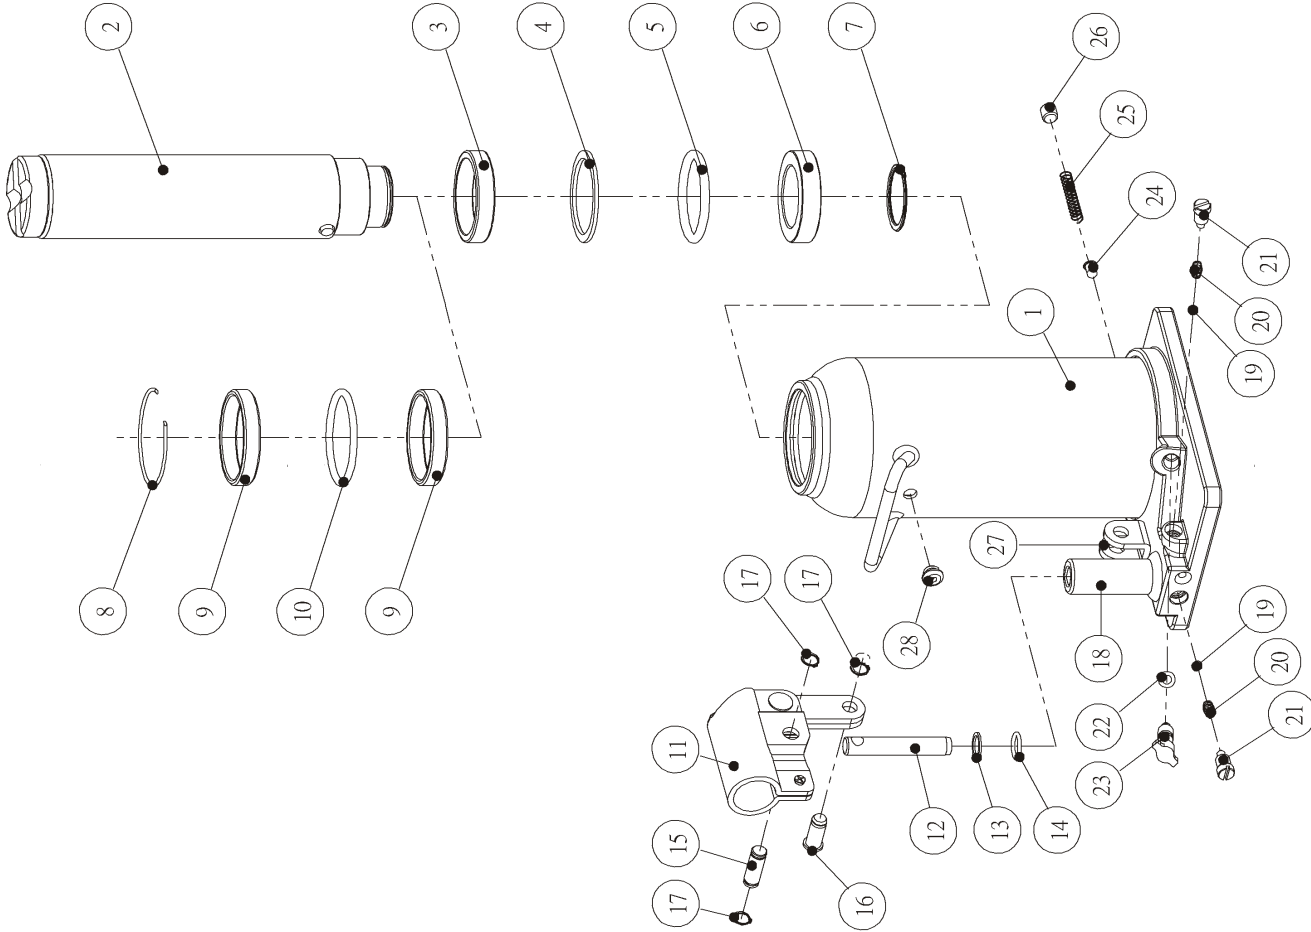


編號	零件名稱	數量	品號	品號
1	底板焊組	1	SH-B-20AB1	SH-B-20BB1
2	主軸組	1	SH-B-20AB2	SH-B-20BB2
3	鐵活塞	1	DH10E-B05	SH20-B11B
4	特製背托環	1	XEDH10E	XEDH10E
5	O型環	1	XBP50A	XBP50A
6	鉗活塞	1	SH20-B08	SH20-B08
7	C型扣環	1	XAS40	XAS40
8	上截止動環	1	XA@2-70	XA@2-70
9	上環環	2	DH10E-B07	DH10E-B07
10	O型環	1	XB4555	XB4555
11	搖柄座組	1	SH20-B12	SH20-B12
12	油泵軸	1	O1-14-71-T16	O1-14-71-T16
13	背托環	1	XGP014	XGP014
14	O型環	1	XP014-90	XP014-90
15	油泵插銷	1	SH20-B37	SH20-B37
16	插銷	1	SH20-B36	SH20-B36
17	C型扣環	3	XAS10	XAS10
18	油泵	1	O0-14-0-51	O0-14-0-51
19	鋼珠	2	XM1/4-G10	XM1/4-G10
20	出入口彈簧	2	XF0.3-5.3-7-14L	XF0.3-5.3-7-14L
21	入口螺柱	2	ST20-B25	ST20-B25
22	O型環	1	XB2.38-5.94	XB2.38-5.94
23	洩壓閥螺柱	1	SH1070-B22	SH1070-B22
24	濾油網	1	XLOIL	XLOIL
25	濾油彈簧	1	XF0.7-35L錐	XF0.7-35L錐
26	塞頭	1	XN-1/8PT	XN-1/8PT
27	U型塊	1	SH20-B33	SH20-B33
28	加油塞子	1	XC00	XC00

* - *修理包

適用範圍：
手動液壓千斤頂

適用型號:SH-30 A/ SH-30B

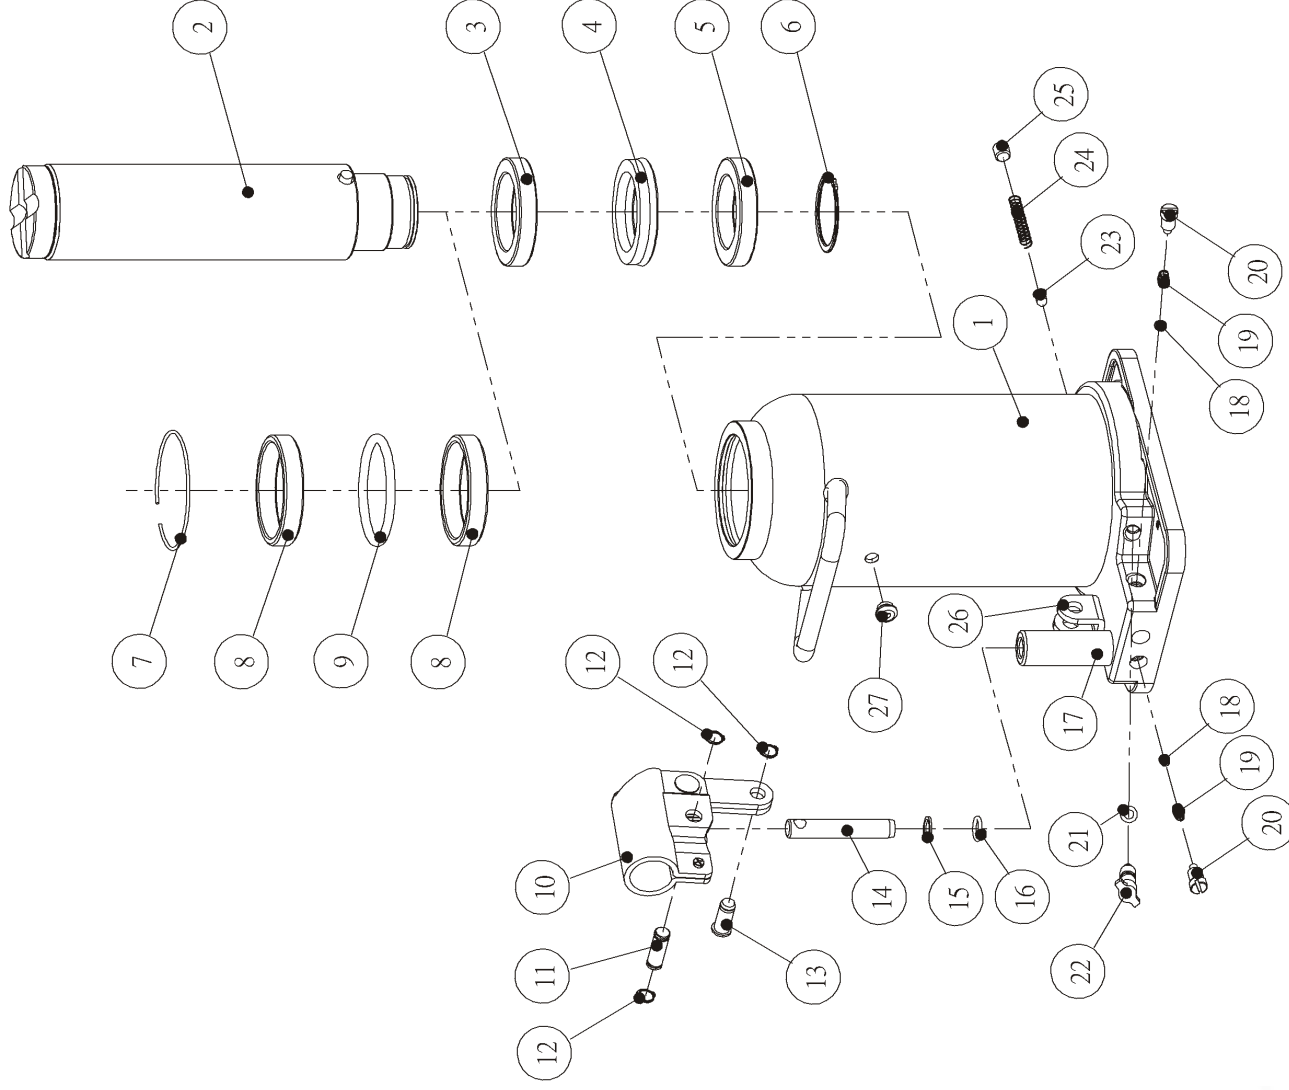


SH-30A		SH-30B	
編號	零件名稱	數量	品號
1	底板焊組	1	SH-B-30AB1
2	主軸組	1	SH-B-30AB2
3	上活塞環	1	SH30-B05
4	油封	1	XEUP150-70-12
5	活塞環	1	ST30-B08
6	C型扣環	1	XAS47
7	止動環	1	XA@2-78
8	上襯環	2	DH15E-B07
9	O型環	1	XBP062
10	搖柄座組	1	SH20-B12
11	油泵插銷	1	SH20-B37
12	C型扣環	3	XAS10
13	插銷	1	SH20-B36
14	油泵軸	1	O1-14-71-T16
15	背托環	1	XGP014
16	O型環	1	XBP014-90
17	油泵	1	O0-14-0-51
18	鋼珠	2	XM1/4-G10
19	出入口彈簧	2	XF0.3-5.3-7-14L
20	入口螺絲	2	ST20-B25
21	O型環	1	XB2.38-5.94
22	洩壓閥螺絲	1	SH1070-B22
23	濾油網	1	XLOIL
24	濾油彈簧	1	XF0.7-35L錐
25	塞頭	1	XN-1/8PT
26	U型塊	1	SH20-B33
27	加油塞子	1	XC00

*修理包]

適用範圍：
手動液壓千斤頂

適用型號:SH-50

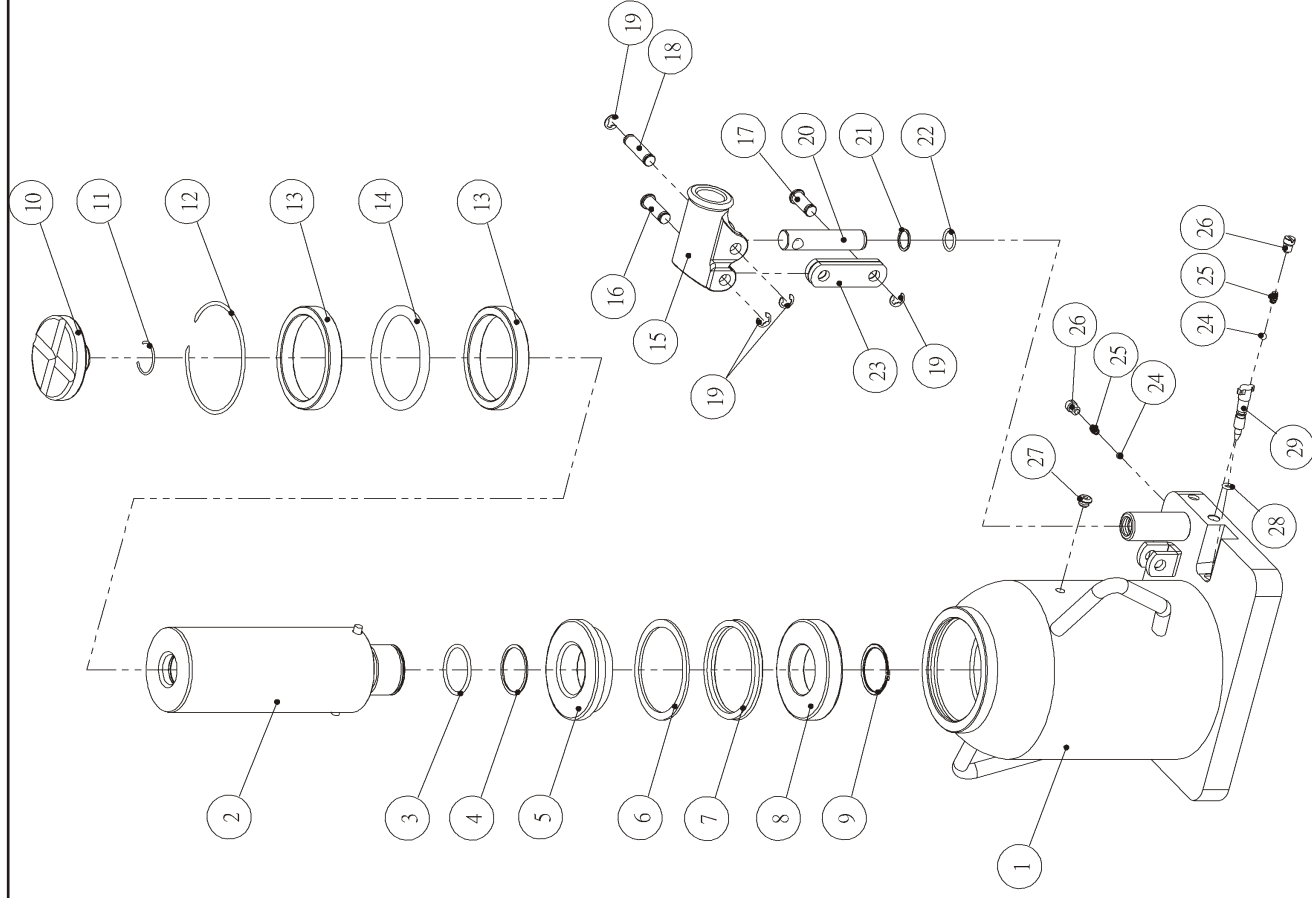


SH-50A

編號	零件名稱	數量	品號
1	油路本體	1	SH-B-50AB1
2	主軸	1	SH50-B04
3	背托環	1	XGP044
4	O型環	1	XBP044
5	上活塞環	1	SH50-B05
6	背托環	1	XG085-100-3
7	油封	1	XEOS100-85-9
8	下活塞環	1	SH50-B06
9	C型扣環	1	XAS50
10	墊塊	1	SH50-B09
11	墊塊止動環	1	XA@2-33
12	上襯止動環	1	XA@3.5-112
13	上襯環	2	SH50-B07
14	O型環	1	XBSH50
15	搖柄座組	1	SH50-B15
16	插銷-中	1	SH50-B13
17	插銷-短	1	SH50-B14
18	插銷-長	1	SH50-B12
19	C型扣環	4	XAE08
20	油泵軸	1	O1-20-92
21	背托環	1	XGP020
22	O型環	1	XBP020
23	連接塊	2	SH50-B11
24	鋼珠	2	XM1/4
25	出入口彈簧	2	XF0.3-5.3-7-14L
26	入口螺柱	2	ST20-B25
27	加油塞子	1	XCOO
28	O型環	1	XB2.4-6.3
29	洩壓閥螺柱	1	SH1070-B22

*修理包 [


適用範圍：
手動液壓千斤頂


適用型號:SH-100

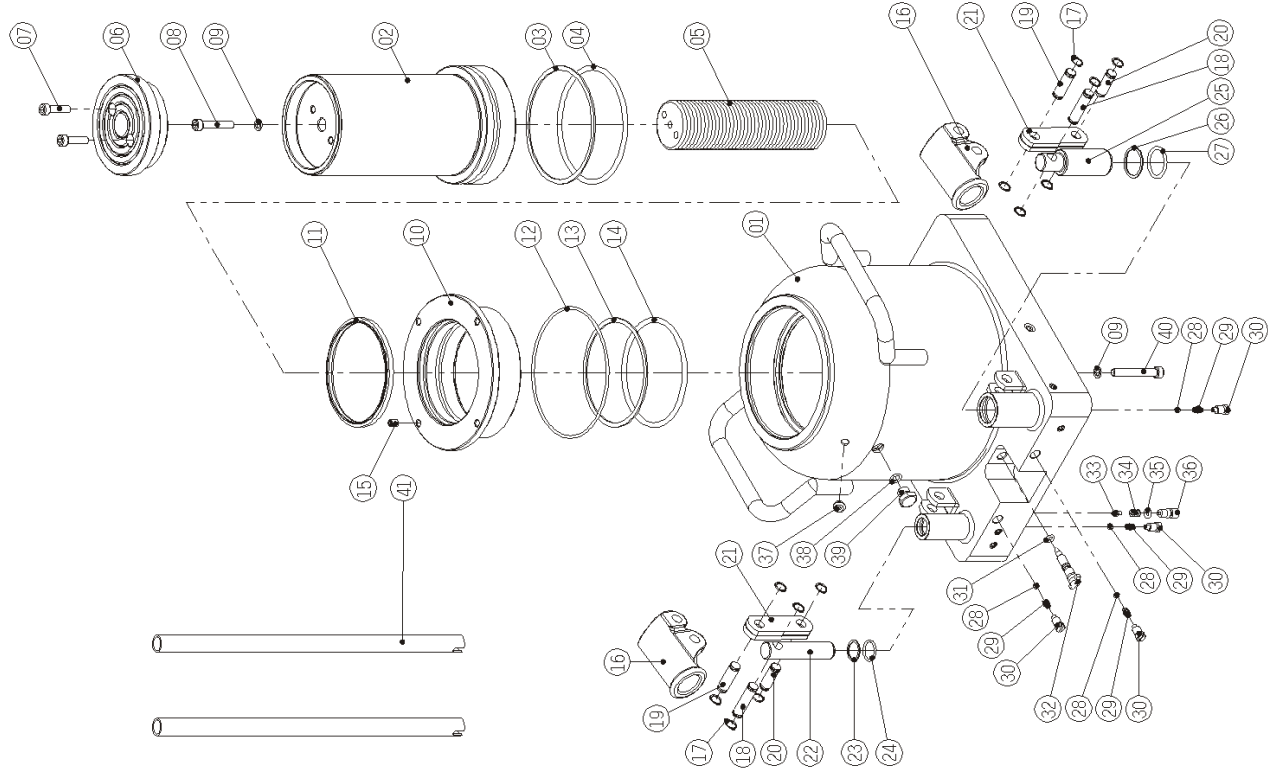

編號	零件名稱	數量	品號
1	底板焊組	1	SH100-BA1
2	主軸	1	SH100-B05
* 3	背托環	1	XGP125
* 4	O型環	1	XBP125
5	彈簧	1	XF7-d41.8A-200
6	墊塊	1	SH100-B06
7	CAP螺栓	2	XNCAPM08-30
8	CAP螺柱	1	XNCAPM08-45
9	銅華司	2	XWC13-8-1
10	上螺帽	1	SH100-B04
* 11	防塵環	1	XDLBH115-125-6
* 12	O型環	1	XBG145
* 13	背托環	1	XGP115
* 14	O型環	1	XBP115
15	SET螺柱	1	XNSEIM08-10
16	搖柄座	2	SH50-B15
17	C型扣環	12	XAS012
18	插銷-長	2	SH50-12
19	插銷-中	2	SH50-13
20	插銷-短	2	SH50-14
21	連接塊	4	SH50-B11
22	高壓油泵軸	1	SH100-B10
* 23	背托環	1	XGP020
* 24	O型環	1	XBP020
25	低壓油泵軸	1	SH100-B09
* 26	背托環	1	XGP030
* 27	O型環	1	XBP030
28	鋼珠	4	XM1/4
29	出入口彈簧	4	XF0.3-5.3-7-14L
30	入口螺柱	4	ST20-B25
* 31	O型環	1	XB2.4-6.3
32	液壓閥螺柱	1	SH1070-B22
33	安全閥頂針	1	SPH900-A14
34	彈簧	1	XF2-D8-12L-4.5T=
* 35	O型環	1	XB2.4-6.3
36	安全閥螺柱	1	SPH900-A36
37	通氣口塞	1	XCOO
* 38	O型環	1	XB3006
39	加油螺柱	1	SH100-B12
40	CAP螺柱	1	XNCAPM08-60
41	搖桿	2	XJSH50
*修理包			

Item	Description	Q'ty
1	Base plate	1
2	O-ring	1
3	spacer	1
4	seal	1
5	plunger	1
6	O-ring	1
7	release valve	1
8	steel ball	1
9	O-ring	1
10	valve	1
11	high pressure steel ball	1
12	spring	1
13	steel ball	1
14	bolt	1
15	low pressure steel ball	1
16	spring	1
17	steel ball	1
18	bolt	1
19	steel ball	1
20	bolt	1
21	O-ring	1
22	spacer	1
23	piston	1
24	cardan joint	1
25	R ring	1
26	bolt	1

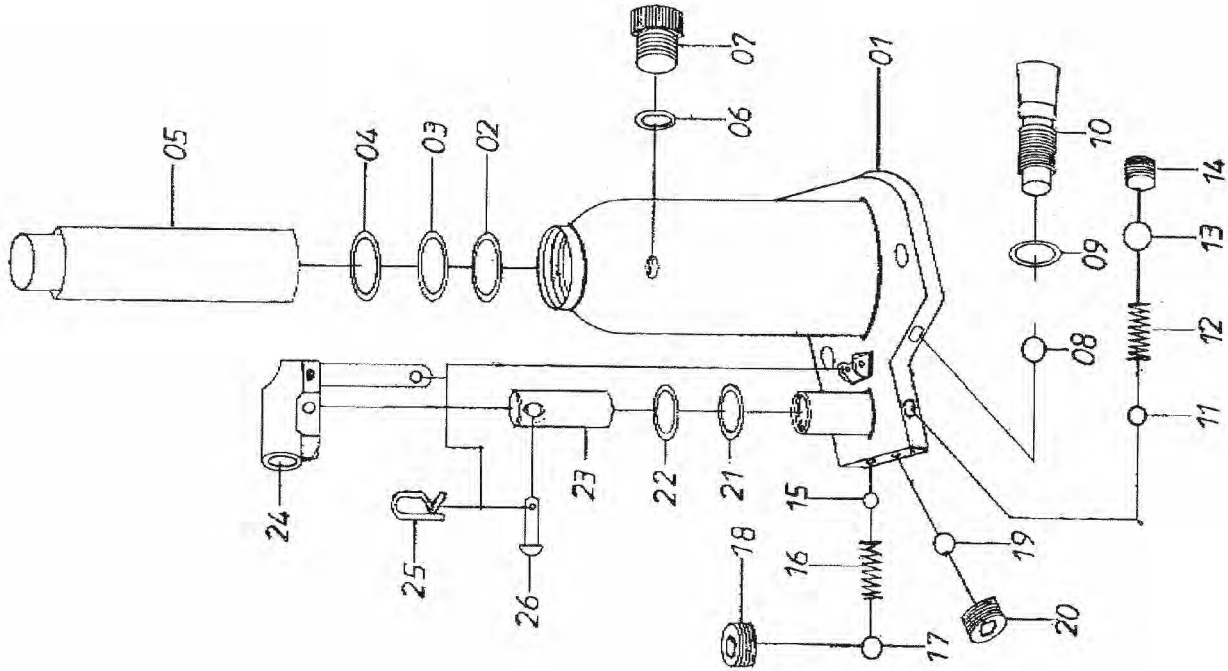


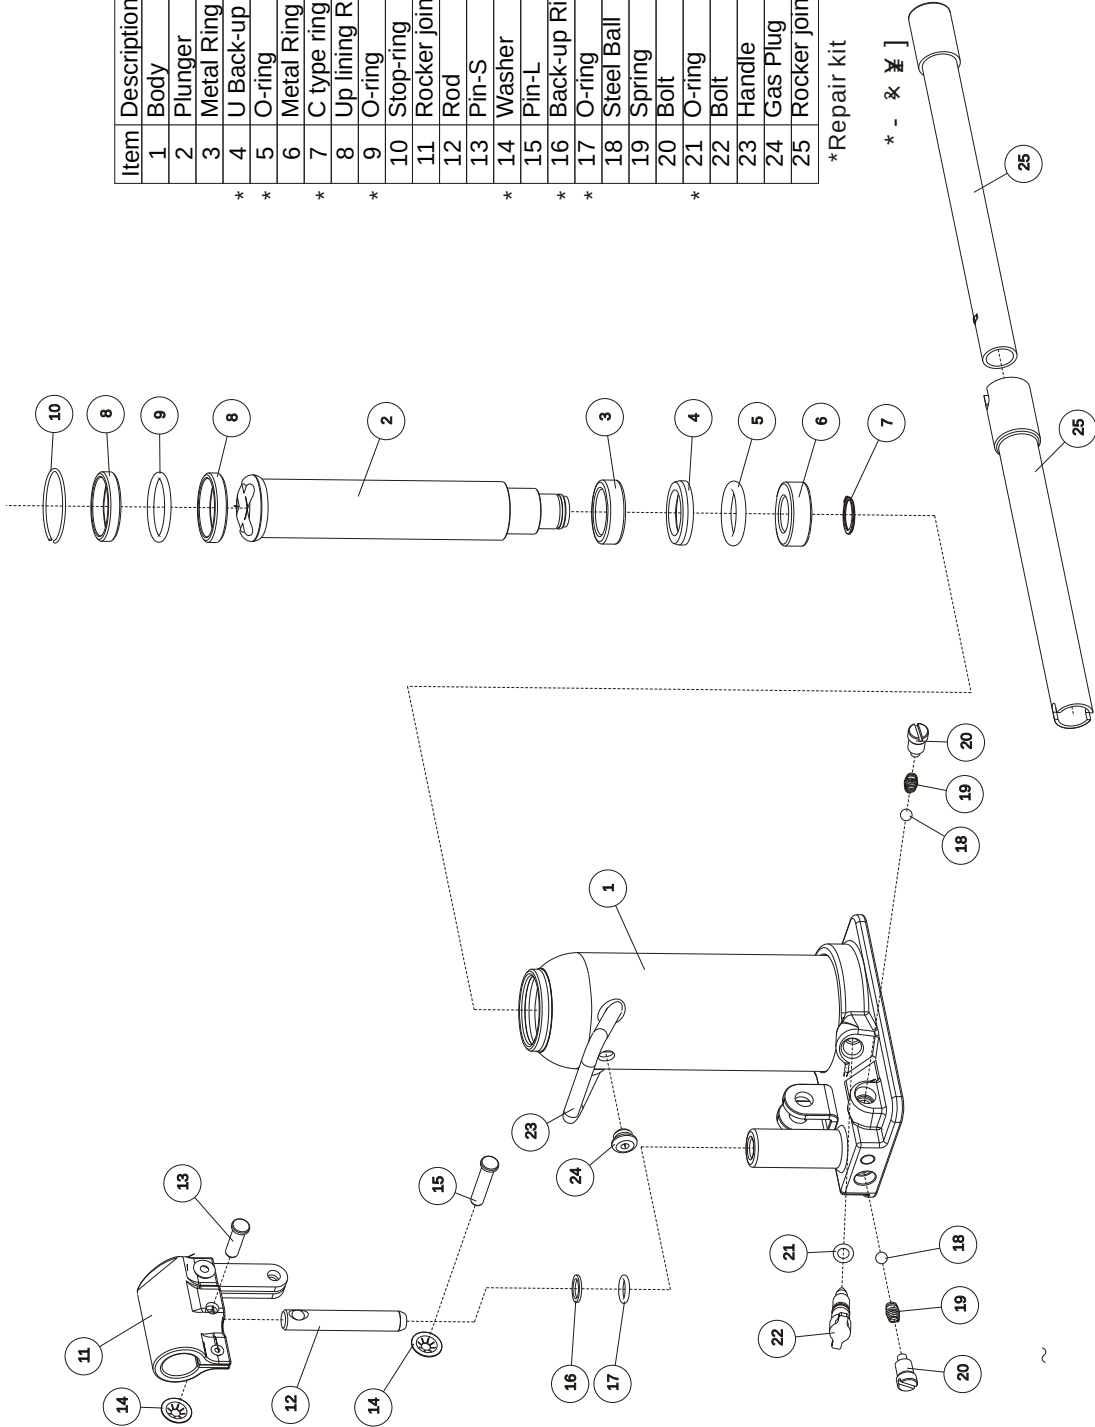

Item	Description	Qty	Part Number
1	Body	1	SH05B-B-B1
2	Plunger	1	SH05B-A01
3	Metal Ring	1	DH2.5E-B05
4	U Back-up Ring	1	XEDH2.5E
5	O-ring	1	XBAS318
6	Metal Ring	1	DH2.5E-B06
7	C type ring	1	XAS19
8	Up lining Ring	2	DH2.5E-B07
9	O-ring	1	XBAS218
10	Stop-ring	1	XA@1.6-D41
11	Rocker joint	1	DH2.5E-BA1
12	Rod	1	SH05B-A02
13	Pin-S	1	DH2.5E-B14
14	Washer	2	DH2.5E-B18-K
15	Pin-L	1	SH05B-A03
16	Back-up Ring	1	XGP011
17	O-ring	1	XBP011
18	Steel Ball	2	XM1/4
19	Spring	2	XF0.3-D5.3-D7-D5.3-14L
20	Bolt	2	ST20-B25
21	O-ring	1	XB2.38-5.94
22	Bolt	1	SH1070-B22
23	Handle	1	SU08-42-60A82
24	Gas Plug	1	XCOO
25	Rocker joint tub	1	DH2.5E-B17


*Repair kit

* - 数量]

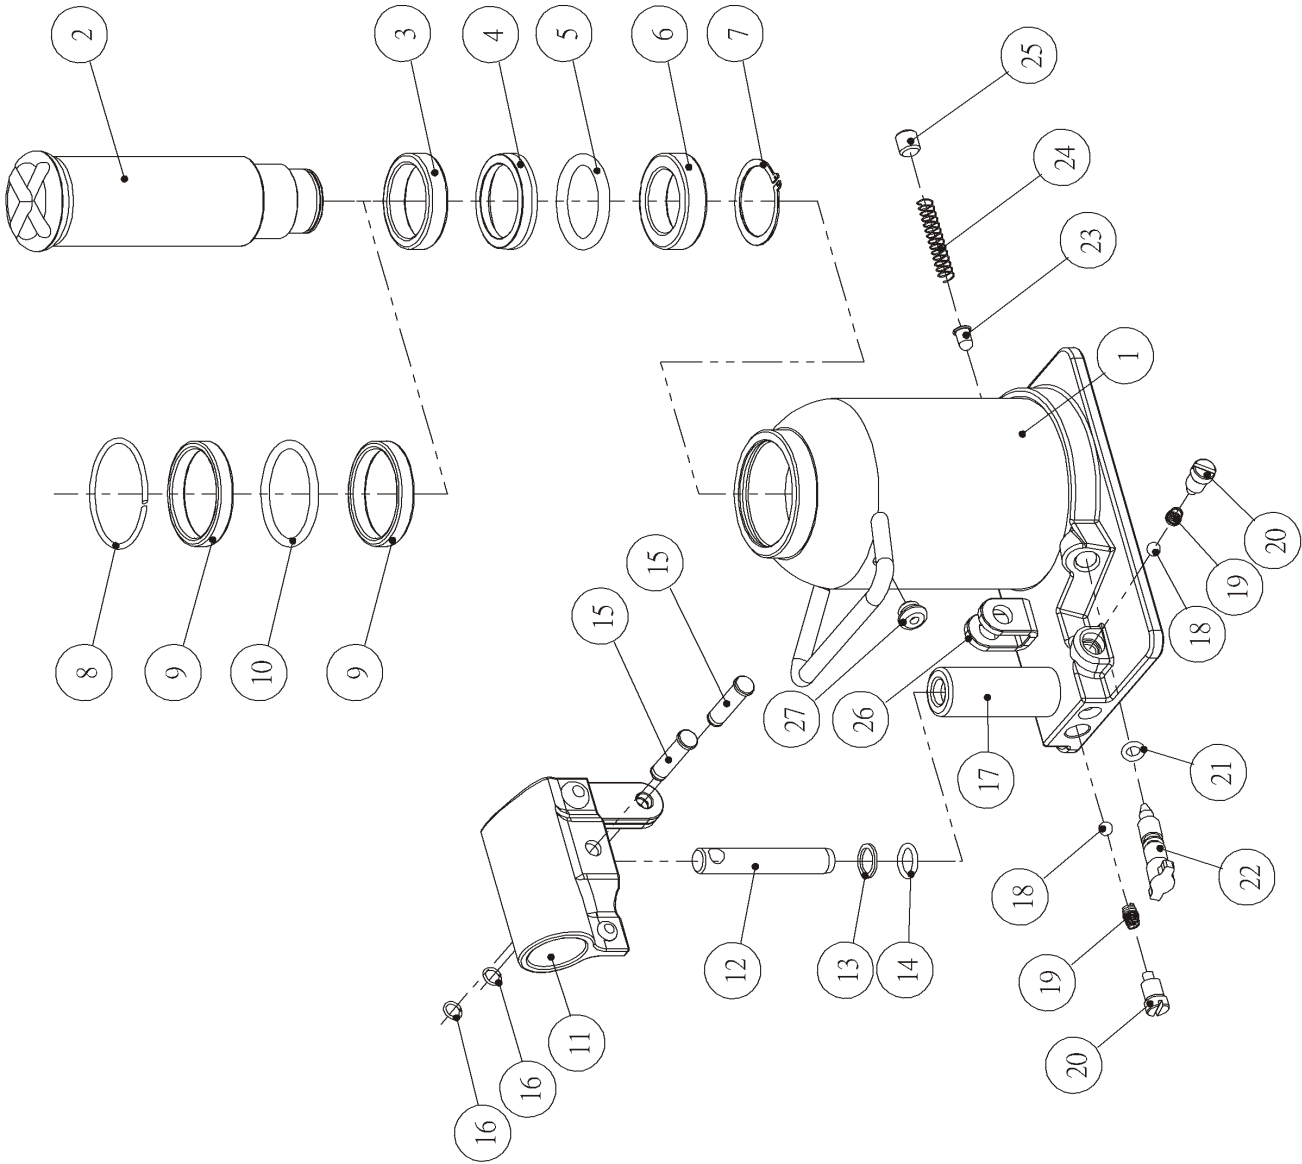


SH-10A		SH-10B	
Item	Description	Q'ty	Part No.
1	body	1	SH-B-10AB1
2	plunger	1	SH-B-10AB2
3	piston	1	DH5E-B05
4	back-up ring	1	XEDH5E
5	O-ring	1	XBAS324
6	metal ring	1	DH5E-B06-1
7	C type ring	1	XAS30
8	stop-ring	1	XA@2-D55.5
9	up lining ring	2	ST20-B04A
10	O-ring	1	XB4.55-42
11	rocker joint	1	SH05-B10
12	rod	1	O1-14-72
13	back-up ring	1	XGP014
14	O-ring	1	XBPO14-90
15	bolt of cranking bar	2	DH5E-B14
16	stop-ring	2	XA@1.1-d7
17	plunger	1	O0-14-0-51
18	steel ball	2	XM1/4-G10
19	spring	2	XF0.3-5.3-7-14L
20	bolt	2	ST20-B25
21	O-ring	1	XB2.38-5.94
22	release valve bolt	1	SH1070-B22
23	filter net	1	XLOIL
24	filter-spring	1	XF0.7-35L 銼
25	PT bolt	1	XN-1/8PT
26	U cup	1	SH05-B09
27	gas plug	1	XC00

*Repair kit

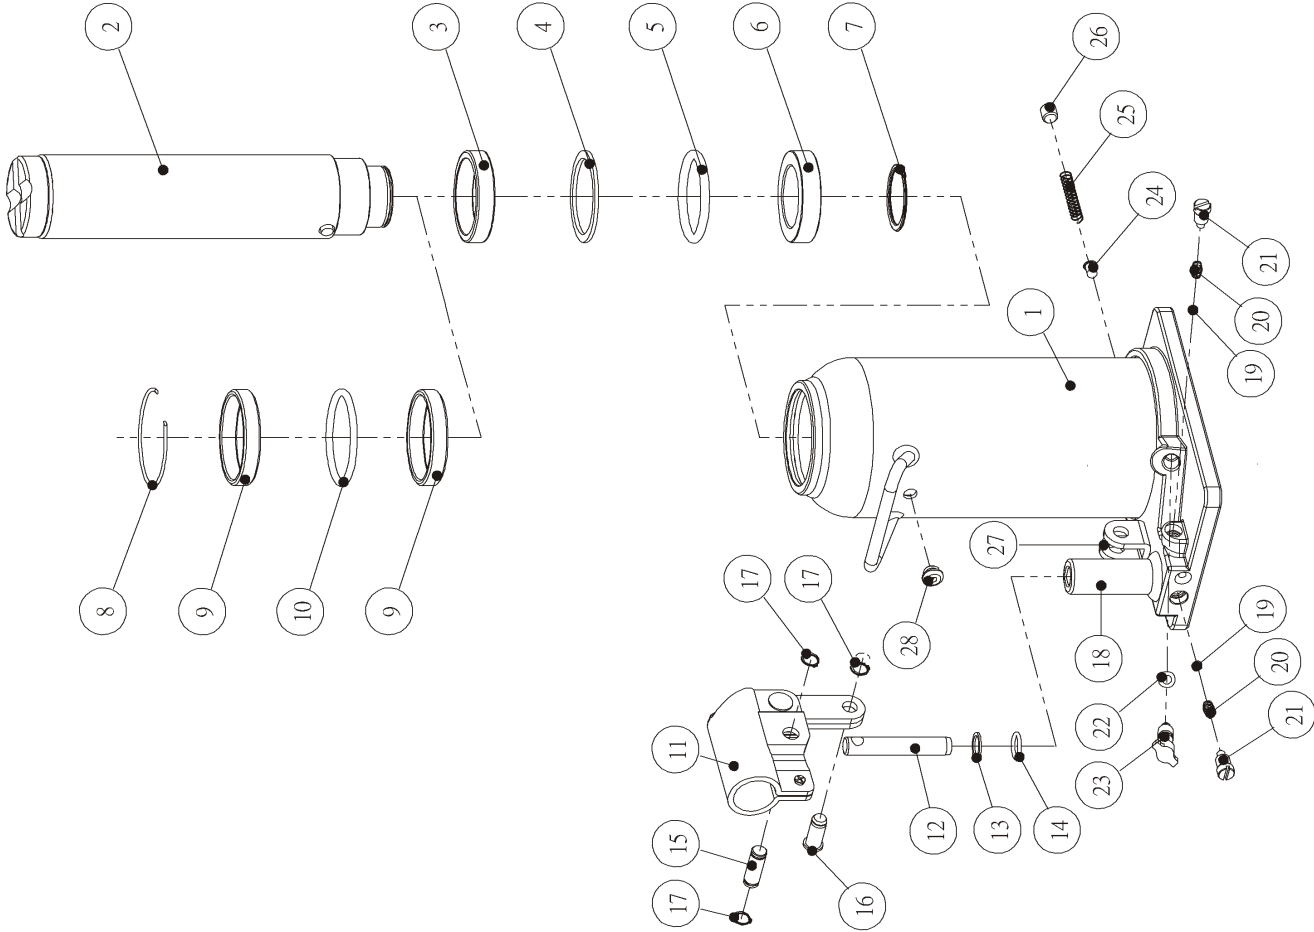


SH-20A		SH-20B	
Item	Description	Q'ty	Part No.
1	body	1	SH-B-20AB1
2	plunger	1	SH-B-20AB2
3	piston	1	DH10E-B05
4	back-up ring	1	XEDH10E
5	O-ring	1	XBP50A
6	metal ring	1	SH20-B08
7	C type ring	1	XAS40
8	stop-ring	1	XA@2-70
9	up lining ring	2	DH10E-B07
10	O-ring	1	XB4555
11	rocker joint	1	SH20-B12
12	rod	1	O1-14-71-T16
13	back-up ring	1	XGP014
14	O-ring	1	XBP014-90
15	bolt of cranking bar	1	SH20-B37
16	bolt of cranking bar	1	SH20-B36
17	C type ring	3	XAS10
18	plunger	1	O0-14-0-51
19	steel ball	2	XM1/4-G10
20	spring	2	XF0.3-5.3-7-14L
21	bolt	2	ST20-B25
22	O-ring	1	XB2.38-5.94
23	release valve bolt	1	SH1070-B22
24	filter net	1	XLOIL
25	filter-spring	1	XF0.7-35L 錐
26	PT bolt	1	XN-1/8PT
27	U cup	1	SH20-B33
28	gas plug	1	XC00

*Repair kit

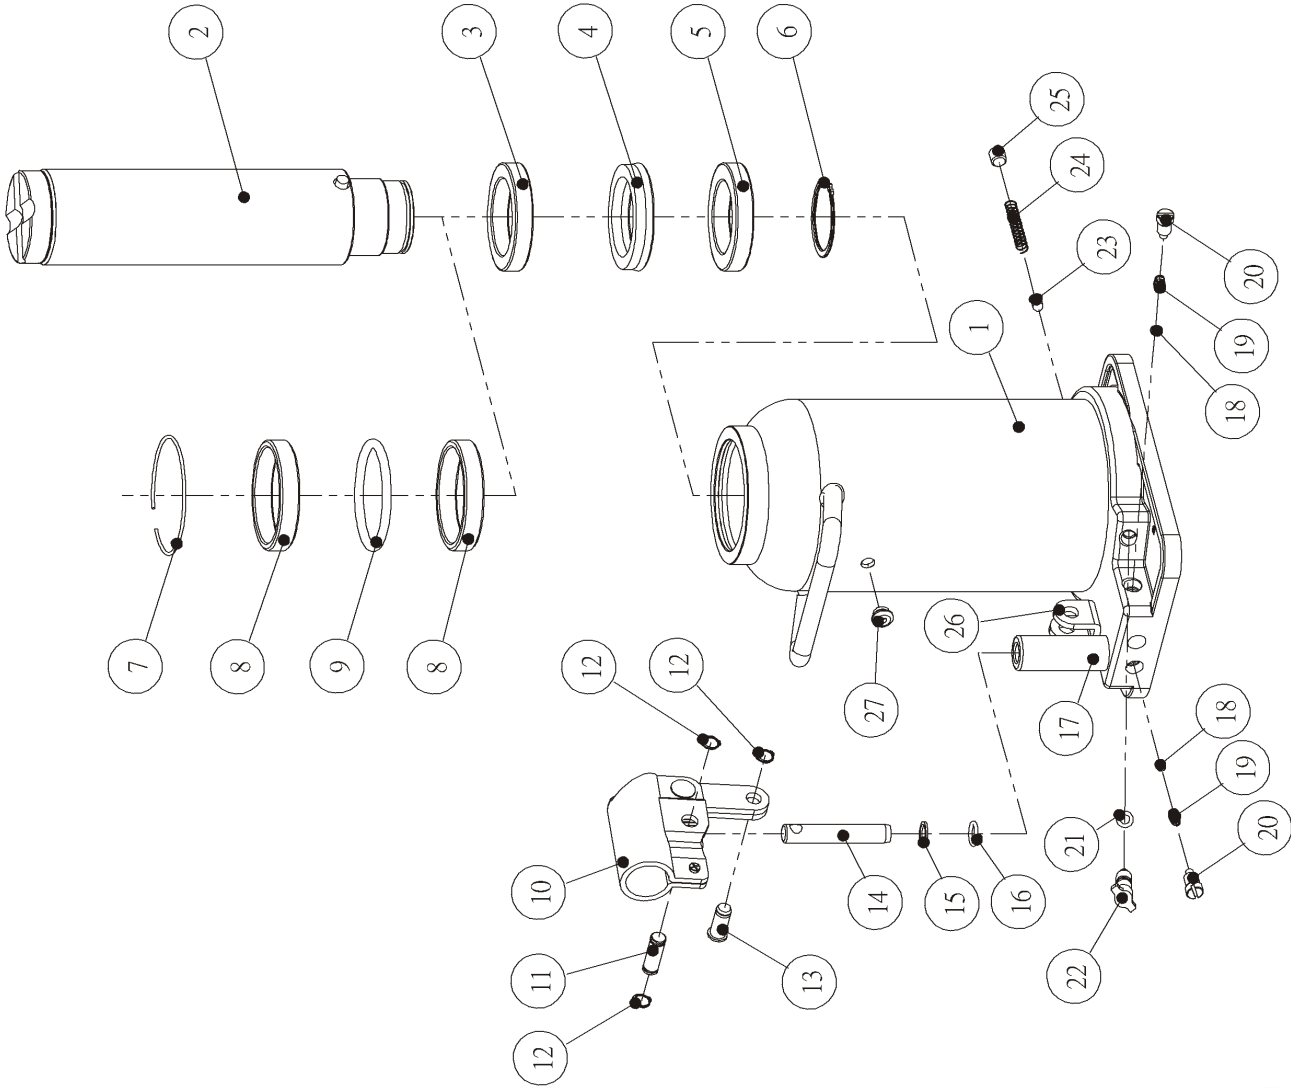

SH-30A			SH-30B	
Item	Description	Q'ty	Part No.	Part No.
1	body	1	SH-B-30AB1	SH-B-30BB1
2	plunger	1	SH-B-30AB2	SH-B-30BB2
3	piston	1	SH30-B05	SH30-B05B
4	O-ring	1	XEUI50-70-12	XEODI70-55-9
5	metal ring	1	ST30-B08	-- --
6	C type ring	1	XAS47	XAS55
7	stop-ring	1	XA@2-78	XA@2-78
8	up lining ring	2	DH15E-B07	SH30-B07B
9	O-ring	1	XBP062	XBP062
10	rocker joint	1	SH20-B12	SH20-B12
11	bolt of cranking bar	1	SH20-B37	SH20-B37
12	C type ring	3	XAS10	XAS10
13	bolt of cranking bar	1	SH20-B36	SH20-B36
14	rod	1	O1-14-71-T16	O1-14-71-T16
15	back-up ring	1	XGP014	XGP014
16	O-ring	1	XBP014-90	XBP014-90
17	plunger	1	O0-14-0-51	O0-14-0-51
18	steel ball	2	XM1/4-G10	XM1/4-G10
19	spring	2	XF0.3-5.3-7-14L	XF0.3-5.3-7-14L
20	bolt	2	ST20-B25	ST20-B25
21	O-ring	1	XB2.38-5.94	XB2.38-5.94
22	release valve bolt	1	SH1070-B22	SH1070-B22
23	filter net	1	XLOIL	XLOIL
24	filter-spring	1	XF0.7-35L 錐	XF0.7-35L 錐
25	PT bolt	1	XN-1/8PT	XN-1/8PT
26	U cup	1	SH20-B33	SH20-B33
27	gas plug	1	XC00	XC00


*Repair kit

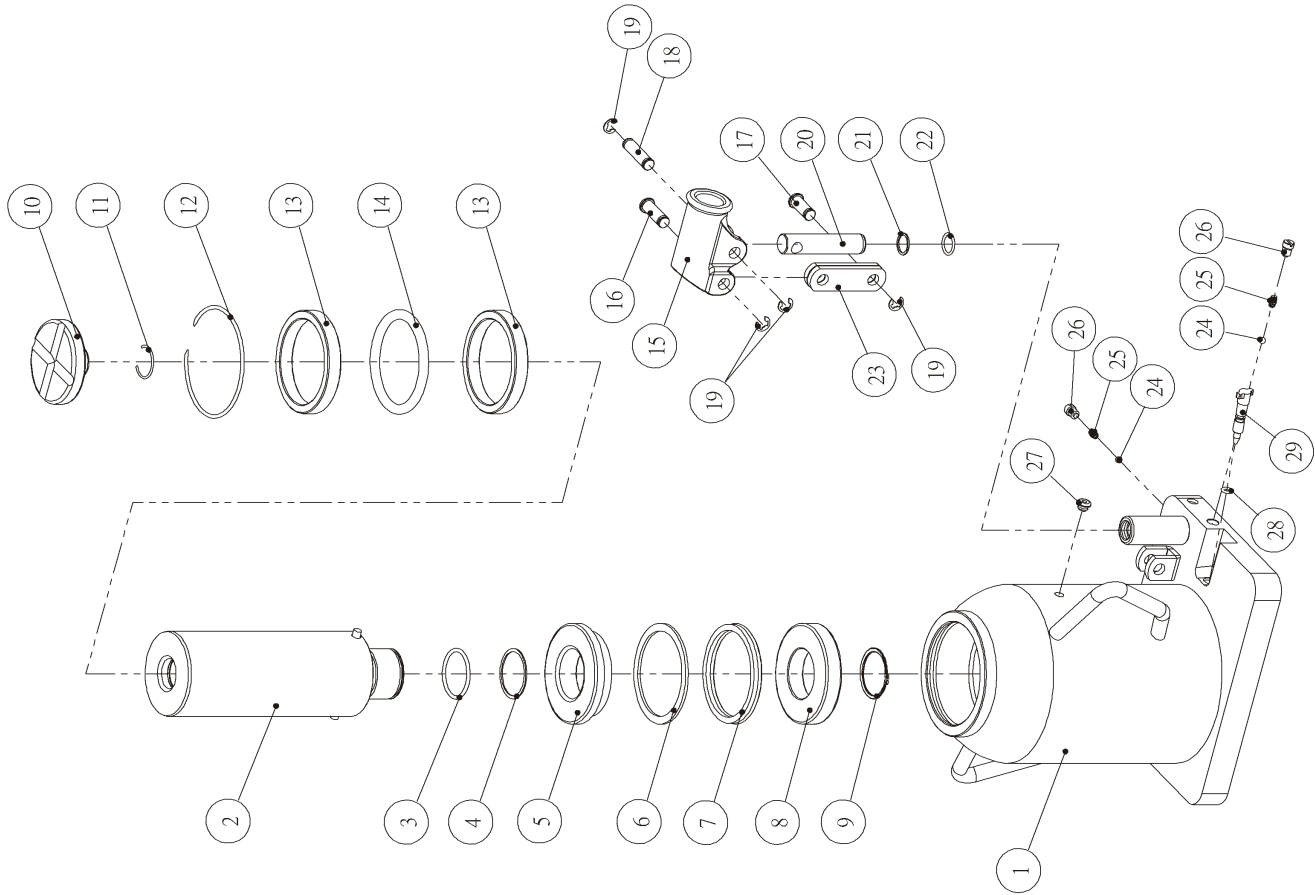

SH-50A

Item	Description	Q'ty	Part Number
1	body combination	1	SH-B-50AB1
2	plug	1	SH50-B04
3	back-up ring	1	XGP044
4	O-ring	1	XBP044
5	piston seal	1	SH50-B05
6	back-up ring	1	XG085-100-3
7	seal	1	XEOS100-85-9
8	piston seal	1	SH50-B06
9	C type ring	1	XAS50
10	saddle	1	SH50-B09
11	stop-ring	1	XA@2-33
12	stop-ring	1	XA@3.5-112
13	up lining ring	2	SH50-B07
14	O-ring	1	XBSH50
15	rocker joint	1	SH50-B15
16	fixed bolt	1	SH50-B13
17	fixed bolt	1	SH50-B14
18	fixed bolt	1	SH50-B12
19	C type ring	4	XAEO8
20	rod	1	O1-20-92
21	back-up ring	1	XGP020
22	O-ring	1	XBP020
23	connector bar	2	SH50-B11
24	steel ball	2	XM1/4
25	spring	2	XF0.3-5.3-7-14L
26	bolt	2	ST20-B25
27	oil bung	1	XCOO
28	O-ring	1	XB2.4-6.3
29	bolt	1	SH1070-B22

*Repair kit

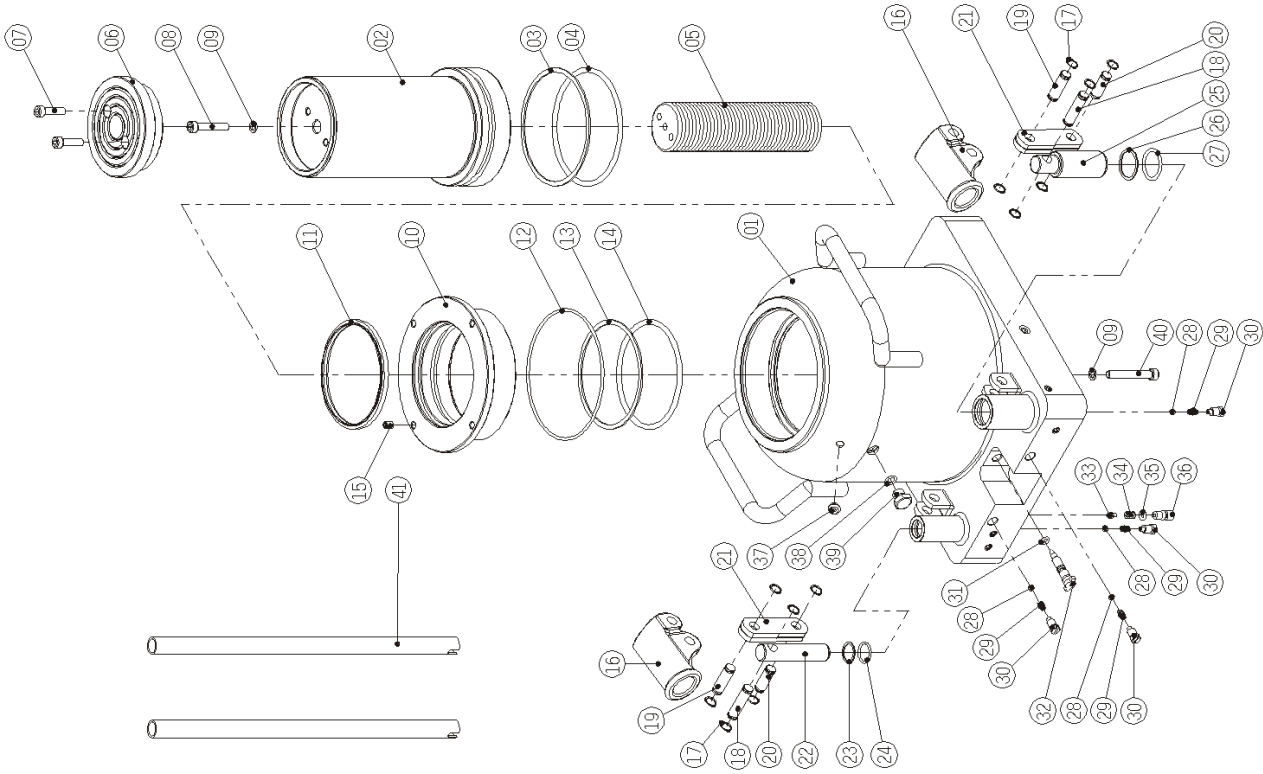

Item	Description	Q'ty	Part Number
1	housing assembly	1	SH100-BA1
2	plunger	1	SH100-B05
3	back-up ring	1	XGP125
4	o-ring	1	XBP125
5	spring	1	XF7-d41.8A-200
6	saddle	1	SH100-B06
7	bolt	2	XNCAPM08-30
8	bolt	1	XNCAPM08-45
9	copper washer	2	XWC13-8-1
10	stop ring	1	SH100-B04
11	dust ring	1	XDLBH115-125-6
12	o-ring	1	XBG145
13	back-up ring	1	XGP115
14	o-ring	1	XBP115
15	bolt	1	XNSETM08-10
16	handle head	2	SH50-B15
17	C type ring	12	XAS012
18	long plug	2	SH50-12
19	middle plug	2	SH50-13
20	short plug	2	SH50-14
21	connector	4	SH50-B11
22	H.P piston	1	SH100-B10
23	back-up ring	1	XGP020
24	o-ring	1	XBP020
25	L.P piston	1	SH100-B09
26	back-up ring	1	XGP030
27	o-ring	1	XBP030
28	steel ball	4	XM1/4
29	inlet & outlet spring	4	XF0.3-5.3-7-14L
30	inlet bolt	4	ST20-B25
31	o-ring	1	XB2.4-6.3
32	release bolt	1	SH1070-B22
33	safety valve plug	1	SPH900-A14
34	spring	1	XF2-D8-12L-4.5T=
35	o-ring	1	XB2.4-6.3
36	safety valve bolt	1	SPH900-A36
37	vent plug	1	XCOO
38	o-ring	1	XB3006
39	gas bolt	1	SH100-B12
40	bolt	1	XNCAPM08-60
41	handle	2	XJSH50

*Repair kit