



巨輪興有限公司

高雄市岡山區岡山路199號

CHU LUN SING CO.,LTD

No.199, Gangshan N. Rd., Gangshan Dist.,
Kaohsiung City 82059, Taiwan

<http://www.sunrun.com.tw>

E-mail:sun.run@msa.hinet.net

TEL:886-7-6210505

FAX:886-7-6217575

輪胎充氣輔助圈 操作說明

TA



中文 : C1~C2

中文
English
Ver.16

1. 安全預防措施



不遵守以下的注意事項和警告將引起設備損失及人員傷害。



重要事項：未滿18歲人員不得擅自操作。操作SUN RUN油壓設備前請先仔細閱讀並了解相關操作手冊、安全事項和警告事項。操作人員負有油壓設備週邊之人員及環境之安全責任。



警告事項：操作人員於使用期間為避免傷害，需全程配戴安全防護措施。



危險事項：液(油)壓設備應遠離火或熱源

高溫會軟化包裝和密封材料，導致液壓油洩漏；高溫同時也會造成油管材質與包裝變質。為確保最好狀態，不要將液(油)壓設備暴露於 65°C(150°F)高溫。在電焊場所時亦應注意防止電焊火花噴到油管。



警告事項：當零件出現裂痕或損壞時，應立即以**SUN RUN** 零件更換。正確標準的零件可防止人員或設備損傷。**SUN RUN**零件經特別設計可完全適用並適用產品標稱的額定荷載。或壓力




重要事項：液壓設備必需由合格的液壓技工進行維修。需要修理時，請連繫就近的**SUN RUN**服務據點並使用**SUN RUN** 液壓油保固方為有效。

2. 規範

Model Number 型 號	Product Name 名 稱	Description 適用功能	Weight 總重 (kg)	Remark 備註
TA	充氣輔助圈 Aerator auxiliary ring	幫助無內胎輪胎充氣時瞬間密合用 Rapidly pressure boost for tubeless tires	12.7	使用空壓(Pneumatic pressure) 10-12kgf/cm ²

3.操作

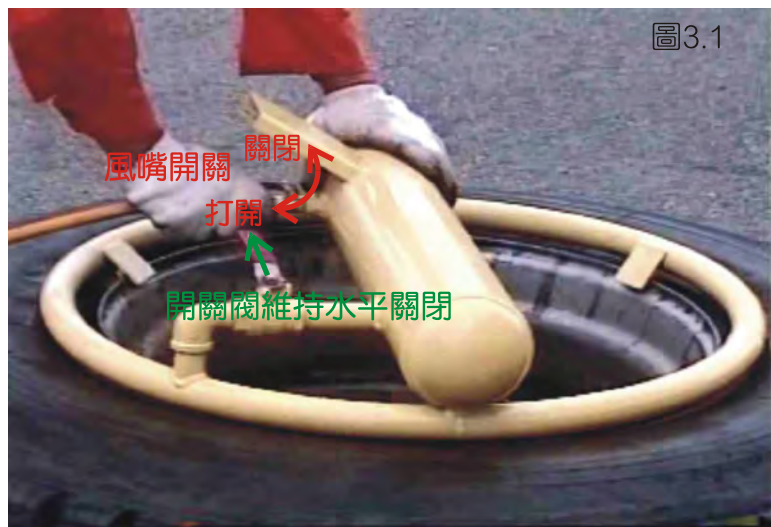

- 3.1 將輪胎充氣輔助圈平扣在鋼圈和輪胎接縫處後，接上風嘴後，順時針打開風嘴開關(同圖3.1)。此時輔助圈開關仍維持在水平關閉位置。
- 3.2 約5秒輔助圈充足氣體後逆時針水平關閉風嘴開關即可分離風嘴。若新胎鋼圈與輪胎間隙較大，第一次無法灌飽輪胎，則可將風源直接裝在輪胎氣嘴上做為輔助補氣使用(同圖3.2)
- 3.3 逆時針推向垂直位置打開輔助圈開關(同圖3.3)。

4.維護

- 4.1 定期檢查風嘴及開關是否有鬆脫或阻塞。
- 4.2 注意外觀是否有生鏽或破損。

出廠證明暨保固書

產品名稱：

型 號：

序 號：

出廠日期： / /

保固期間： / / ~ / /

該產品經公司嚴格品質管制,並測試合格出廠,本產品自驗收合格日起保固一年,如非人為使用不當或天然不可抗拒之災害,本公司免費維修,如非以上之原因本公司將酌收材料成本負責維修。

公司：巨輪興有限公司

負責人：蘇明益

高雄市岡山區岡山北路199號

TEL:886-7-6210505

FAX:886-7-6217575



巨輪興有限公司

高雄市岡山區岡山北路199號

CHU LUN SING CO.,LTD

No.199, Gangshan N. Rd., Gangshan Dist.,
Kaohsiung City 82059, Taiwan

<http://www.sunrun.com.tw>

E-mail:sun.run@msa.hinet.net

TEL:886-7-6210505

FAX:886-7-6217575

OPERATING INSTRUCTIONS

Tire separation tools

TA



English : E1

中文
English
Ver.16

1. SAFETY PRECAUTIONS



Fail to comply with the following cautions and warnings could cause equipment damage and personal injury.



IMPORTANT :Minimum age of the operator must be 18 years The operator must have read and understood all instructions, safety issues, cautions and warnings before starting to operate the SUN RUN equipment. The operator is responsible for this activity towards other persons.



WARNING: Always wear safety glasses. The operator must take precaution against injury due to failure the tool or workpiece.



CAUTION : KEEP HYDRAULIC EQUIPMENT AWAY FROM FLAMES AND HEAT. Excessive heat will soften packings and seals, resulting in fluid leaks. Heat also weakens hose materials and packings. For optimum performance do not expose equipment to temperatures of 65°C(150°F) or higher. Protect hoses and cylinders from weld spatter.



WARNING: Immediately replace worn or damaged parts with genuine SUN RUN parts. SUN RUN parts are designed to fit properly and withstand rated loads.



IMPORTANT: Hydraulic equipment must only be serviced by a qualified hydraulic technician. For repair service, contact the SUN RUN Service Center in your area. To protect your warranty, use only SUN RUN oil.

2.SPECIFICATION

Model Number 型 號	Product Name 名 稱	Description 適用功能	Weight 總重 (kg)	Remark 備註
TA	充氣輔助圈 Aerator auxiliary ring	幫助無內胎輪胎充氣時瞬間密合用 Rapidly pressure boost for tubeless tires	12.7	使用空壓(Pneumatic pressure) 10-12kgf/cm ²

3.OPERATION



- 3.1 Lightly buckle the aerator auxiliary ring on the tire and wheel rim connection, then connect the tuyere, clockwise open the air.(see fig.3.1)
- 3.2 Approximately 5 second, the air will be full then turn off the tuyere and separate.
If the wheel rim and tire space too big or you still can't full of the air in the tire, you can connect the tuyere to the tire to help the air pressure.(see fig.3.2)
- 3.3 Final, levorotary pen the switch.(see fig.3.3)

4.MAINTAIENANCE

- 4.1 Inspect the tuyere and switch for a period time to prevent obstruction or broken.
- 4.2 Check the tool to prevent rust.